
digital ACCESSLINE **PHONE SERVICE**

Featuring the Vertical Xcelerator IP Phone System



Owner's Manual V.2-

May 10

AccessLine Communications

Owners Manual AccessLine 5-4-10

Table of Contents

1	Introduction	7
	Conformance.....	7
	Important Safety instructions	7
	FCC Information	9
	Basic Requirements.....	16
	Using this Document.....	16
2	Getting to know your Vertical Xcelerator IP.....	17
	Parts Check	17
	Front Panel	17
	Before you begin	19
	Assigning Extension Numbers to Phones	19
	Installing the Base Unit	19
	Installing the Desk Phones	21
	Connecting a Fax Machine.....	25
	Connecting your Existing Phone Line(s)	26
	Setting up the Stand	26
	Wall-mounting a Desk Phone	27
	Connecting your Cordless Phones	28
	Connecting the Cordless Transmitter:.....	28
	Setting up the Cordless Phones	29
	Registering Cordless Phones:	31
	Activating the Service	31
3.	Using Your Vertical Xcelerator Phone System.....	33
	System Description	33
	Introduction to your Vertical Xcelerator Phones	33
	Getting Started	33
	System Desk Phone	33
	Introduction to your system Desk Phone	33
	Using the Desk Phone display	34
	Navigate in the Menu.....	35
	Using the Speakerphone Key	36
	Using the Mute Key	37
	The Ringing / Message Waiting Light:.....	37

AccessLine Communications

Owners Manual AccessLine 5-4-10

Using the Function Keys	38
Desk Phone– Basic Call Features	39
Answering a call	39
Placing a call	39
Handling Multiple Calls	40
Answering a second call.....	40
Placing a second call	40
Call Hold	40
Call Transfer	41
Call Park	42
Paging (Intercom)	43
Forwarding Incoming Calls.....	44
Enable Forward All Calls on Your Phone.....	44
Cancel Forward All Calls on Your Phone.....	44
Conference Calls	45
Using your Desk Phone with a headset	45
Additional Call Features.....	46
Redial.....	46
Mute	46
Call Log (Call Record)	46
Speed Dial list	47
Personal Phone Book.....	48
Auto Answer	49
Caller Blocking	49
Distinctive Ringing.....	50
Inbound Caller ID	50
Extension Set-Up options	51
Do Not Disturb.....	51
Additional Volume Adjustments	51
Administrator Functions	52
Changing the Administrator Password.....	52
Phone Lock/Unlock.....	53
Entering a User Name for a Phone	53
Using Voicemail.....	54
Record a personal greeting	54
Retrieving messages from your Desk Phone	54

	Retrieving messages when you are away from the office	54
	Change your Voice Mailbox Password	55
	Forward Voicemail Messages	55
	Change the Number of Rings Before Voicemail Picks Up	55
	Using a Fax Machine	56
4.	Cordless Phones	57
	Introduction	57
	Cordless Phone Features	57
	Getting Started	58
	Cordless Phone Key Descriptions	61
	Idle Mode Options	63
	Cordless Phone Main Menu	63
	Using the Volume Control	65
	Using the Speakerphone	65
	Locking/Unlocking the Keypad	65
	Making and Answering Calls	65
	Placing a call	66
	Intercom Calls	66
	Making an Intercom Call	66
	Calling a Contact	66
	Calling from the Call Log	66
	Calling Using Redial	67
	Calling Using Speed dial	67
	Answering Calls	67
	Answering a Call	67
	Answering a Call on the Speaker Phone	67
	Auto Answer Mode	67
	Any Key Answer Mode	68
	Caller ID	68
	Handling Calls	68
	Placing a Call on Hold	69
	Receiving a Second Call	69
	Swapping Calls	69
	Conferencing Calls	70
	Calling with a Call on Hold	70

AccessLine Communications

Owners Manual AccessLine 5-4-10

Transferring Calls.....	70
Blind Transferring to another Cordless Phone or Desk Phone.....	70
Blind Transferring to another phone number:	71
Blind Transferring to a Contacts List Number:	71
Parking a Call	72
Muting/Unmuting a Call	72
Ending Calls	72
Unconditional Call Forwarding	72
Configuring Unconditional Call Forwarding.....	72
Busy Call Forwarding.....	73
Configuring Busy Call Forwarding	73
No Answer Call Forwarding	73
Configuring No Answer Call Forwarding	73
Customizing Your Cordless Phone.....	74
Entering Text, Numbers, and Symbols	74
Text Input Modes	74
Input Characters:.....	75
Input Symbols.....	75
Time/Date and Time Zone	75
Temporarily Changing Time Zone	76
Setting Do Not Disturb	76
Setting Call Waiting.....	76
Setting Audio	77
Changing the Ringer Melody	77
Changing the Ringer Volume.....	77
Changing the Message Tone.....	78
Changing the Keypad Sound	78
Changing Advisory Tones	78
Enabling/Disabling Silent Mode	79
Voicemail	79
Managing Contacts	79
Contacts List.....	79
Adding a Contact	80
Editing a Contact.....	80
Deleting a Contact	81
Deleting All Contacts	81

AccessLine Communications

Owners Manual AccessLine 5-4-10

Changing the Default Number for a Contact.....	81
Creating a Speed dial for a Contact	82
Groups of Contacts	82
Creating a Contact Group	82
Adding a Contact to a Group.....	83
Call Log	83
Viewing Entries in the Call Log	84
Resetting the Cordless Transmitter	84

1 Introduction

Congratulations on purchasing the AccessLine Digital Phone Service featuring the Vertical Xcelerator phone system. You will now be able to share your phone connection between fixed & wireless handsets and access the latest in 'Voice over IP' services while also having the ability to use your existing phone lines. This User Guide will show you how to setup and use Vertical Xcelerator phone system.

IMPORTANT SAFETY AND CONFORMANCE INFORMATION FOR VERTICAL XCELERATOR IP PBX BASE UNIT AND DESKPHONES

Conformance

This equipment is designed for use in the United States.

This equipment complies with the following standards:

FCC Part 15, Subparts B, C, D

FCC Part 68

UL60950

Analog extension ports: TNV3

CO port: TNV3

ADSL port: TNV3

Power fail port TNV3

LAN/WAN ports SELV

Important Safety instructions

The following safety information is reprinted from IEC60950.

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:
- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water (for example, in a wet basement).
- Do not place this product on an unstable cart, stand, or table. The product can fall, causing serious damage to the product.

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
- Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating; these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
 - This product should be operated only from the type of power source indicated in the manual. If you are not sure of the type of power source to your building, consult your dealer or local Power Company.
 - The power socket outlet must be located near the product and must be easily accessible to allow plugging/unplugging.
 - Do not allow anything to rest on the power cord. Do not locate this product where persons walking on it will abuse the cord.
 - Do not use an extension cord with this product's AC power cord. The AC outlet for this product should not be used for any other electrical equipment.
 - Never push objects of any kind into this product through cabinet slots as they can touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
 - To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers can expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the product is subsequently used.
 - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions.
 - Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls can result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
 - Avoid using a telephone during an electrical storm. There can be a remote risk of electric shock from lightning.
 - Do not use the telephone to report a gas leak in the vicinity of the leak.

CAUTION

**Use only 26 AWG line cord or larger for
Central Office line connections.**

FCC Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by ACTA.

A FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is Part 68 compliant. See Installation Instructions for details.

The REN is used to determine the quantity of devices that may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. Typically, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line (as determined by the total RENs) contact the local Telephone Company.

If this system causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the Telephone Company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The Telephone Company may make changes to its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the Telephone Company will provide advance notice so you can make the necessary modifications to maintain uninterrupted service.

If the equipment is causing harm to the telephone network, the Telephone Company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information.)

This equipment is hearing aid compatible.

Customer Owned Coin/Credit Card Phones

To comply with state tariffs, the Telephone Company must be given notification prior to connection. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.

Data Equipment

The table below shows which jacks are associated with which modes of operation:

Mode of Operation	USOC Jack
Permissive	RJ11C

Systems

Facility Interface Codes (FIC), Service Order Codes (SOC), USOC Jack Codes and Ringer Equivalence Numbers (REN) are shown in the table below for each port where applicable:

AccessLine Communications

Owners Manual AccessLine 5-4-10

Port	FIC	SOC	USOC	REN
Line 1	02LS2	9.0Y	RJ11C	0.1B
Line 2	02LS2	9.0Y	RJ11C	0.1B
Line 3	02LS2	9.0Y	RJ11C	0.1B
Phone	02LS2	9.0Y	RJ11C	0.1B

Automatic Dialers

WHEN PROGRAMMING EMERGENCY NUMBERS AND (OR) MAKING TEST CALLS TO EMERGENCY NUMBERS:

1. Remain on the line and briefly explain to the dispatcher the reason for the call.
2. Perform such activities in the off-peak hours, such as early morning or late evenings.

Toll Restriction and Least Cost Routing Equipment

The software contained in Xcelerator phone system to allow user access to the network must be upgraded to recognize newly established network area codes and exchange codes as they are placed into service.

Failure to upgrade the premises systems or peripheral equipment to recognize the new codes as they are established will restrict the customer and the customer's employees from gaining access to the network and to these codes.

Equal Access Requirements

This equipment is capable of providing users access to interstate providers of operator services through the use of access codes. Modification of this equipment by call aggregators to block access dialing codes is a violation of the Telephone Operator Consumers Act of 1990.

Electrical Safety Advisory

It is strongly suggested that an AC surge arrestor be installed in the AC outlet to which this equipment is connected.

Radio Interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

RF Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 8 inches (20 centimeters) between the radiator and your body.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Modifications

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. There are no user-serviceable parts or adjustments inside this equipment - please do not open the equipment case.

IMPORTANT SAFETY AND CONFORMANCE INFORMATION FOR VERTICAL XCELERATOR CORDLESS TRANSMITTER AND CORDLESS PHONES

FCC Information

This equipment complies with Part 15 of the FCC rules and Part 68 of the FCC rules, and the requirements adopted by the Administrative Council for Terminal Attachments (ACTA). Located on the equipment is a label that contains, among other information, the FCC registration number, and the ringer equivalence number (REN). If requested, this information must be provided to the telephone company. The REN is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To ascertain the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

This equipment cannot be used on the telephone company-provided coin service. Connection to Party Line Service is subject to State Tariffs. If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If such advance notice is not practicable, the telephone company will notify the customer as soon as possible. Also, you

AccessLine Communications

Owners Manual AccessLine 5-4-10

will be advised of your right to file a complaint with the FCC if you believe this is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice to enable you to make the necessary modifications in order to maintain uninterrupted service. If the trouble is causing harm to the telephone network, the telephone company may request you to disconnect the equipment from the network until the problem is resolved.

This equipment uses the following USOC jacks: RJ11C.

It is recommended that the customer install an AC surge arrester in the AC outlet to which this device is connected. This is to avoid damage to the equipment caused by local strikes of lightning and other electrical surges.

This product is manufactured for Vertical Communications, Inc. Copyright© 2009. All rights reserved. Any copying or reproduction of the product or its associated user manual is strictly prohibited. The content of this document is subject to change without prior notice.

Consumer Information

- a) This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the back of this equipment is a label that contains, among other information, a product identifier in the format US:T7HCT8010. If requested, this number must be provided to the telephone company.
- b) An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.
- c) A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA.
- d) The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

Additional FCC Information

- a)** If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as

AccessLine Communications

Owners Manual AccessLine 5-4-10

soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

b) The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

c) Should you experience trouble with this equipment, please contact your Service Provider for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

d) Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.

e) Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

f) NOTICE: If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this 1.9GHz DECT Product for VoIP and PSTN does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

g) This equipment is hearing aid compatible.

NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrestor is recommended.

Applicable for Coin or Pay Phone Only

To comply with state tariffs, the telephone company must be given notification prior to connection for customer-owned coin or credit card phone. In some states, the state public utility commission, public service commission or corporation commission must give prior approval of connection.

Important Safety Information

Charge the battery or handset only in combination with CP2002 Charger and the SALOM SSW-1444US adapter that comes with the product. Plug the SALOM SSW-1444US AC/DC adaptor in a wall outlet socket near the equipment for easy access/removal of the AC/DC adaptor.

Important Battery Information

This product uses rechargeable Lithium-ion batteries 3.7V, 650mAh. Only use batteries that come with the handset or dedicated spare batteries marked with "Battery Pack 3.7V 650mAh Li-ion". Do not use any other type, since this may present a risk of leakage, fire, explosion or other hazardous situation. For battery replacement or removal please remove the battery cover of the handset. Never disassemble, customize or short-circuit batteries. Do not place battery in fire or heat the battery. Charge the battery or handset only in combination with

AccessLine Communications

Owners Manual AccessLine 5-4-10

CP2002 Charger and the SALOM SSW-1444US adapter that comes with the product.

Sensitive Electronic Environment

Any radio-based equipment can potentially cause interference with other equipment and can be interfered from other equipment. This also applies for DECT equipment. However due to the very low transmission power level the chances for interference are very small. Research proves that operational DECT phones normally don't influence electronic equipment however some precautions must be taken into account for sensitive electronic equipment e.g. sensitive laboratory equipment. When DECT phones operate in straight nearness of sensitive electronic equipment incidental influence can appear. You are advised not to place the DECT phone on or close (less than 10cm) to this kind of equipment, even in standby mode. Please also use the other documentation supplied with the various parts of your telephone system.

Product Disposal Information

Disposal of electrical and electronic products in countries outside the European Union should be done in line with the local regulations. If no arrangement has been made with Vertical Communications or your supplier, please contact the local authorities for further information.

Battery Disposal Information

Defect or exhausted batteries should never be disposed of as municipal waste. Return old batteries to the battery supplier, a licensed battery dealer or a designated collection facility. Do not incinerate batteries.

Regulatory Information

Interference Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Privacy of communications may not be ensured when using this phone.

Exposure to Radio Frequency (RF) Signals:

This wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This product has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE 1528-2003".

CAUTION: To maintain the compliance with the FCC's RF exposure guideline, place the base unit at least 20 cm from nearby persons. For body worn operation, this handset has also been tested and meets the FCC RF exposure guideline when used with the Vertical belt clip supplied for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Hearing Aid Compatibility (HAC/VC):

This handset meets the FCC standard for Hearing Aid Compatibility.

FCC Identifier: ELIRTX3080
Name of Grantee: RTX America Inc.
Date Granted: 9/23/05
Grant Number: R0508295-4
Equipment Class: Part 15 Unlicensed PCS portable Tx
held to ear
Notes: RTX3080.32
FCC Rule Parts: 15D
Frequency Range: 1921.54-1928.45MHz

UL Identifier: E253011-A4-UL-1
Date Granted: 11/15/05

AccessLine Communications

Owners Manual AccessLine 5-4-10

Basic Requirements

In order to use all the features of the AccessLine Digital Phone Service and the Xcelerator system, you must have the following:

- Broadband Internet access
- At least one free port on your router or modem/router
- Your router must be set to DHCP

Using this Document

Notational conventions

Acronyms are defined the first time they appear in the text.
The term LAN refers to a group of Ethernet-connected computers at one site.

Typographical conventions

Italic text is used for items you select from menus and drop-down lists and the names of displayed web pages.
Bold text is used for text strings that you type when prompted by the program, and to emphasize important points.

Special messages

This document uses the following icons to draw your attention to specific instructions or explanations.



Provides clarifying or non-essential information on the current topic.



Explains terms or acronyms that may be unfamiliar to many readers. These terms are also included in the Glossary.



Provides messages of high importance, including messages relating to personal safety or system integrity.

2 Getting to know your Vertical Xcelerator IP

Parts Check

Your package should arrive containing the following:

PARTS CHECK		
Your package should arrive containing the following		
BASE UNIT		
 Vertical Xcelerator Base Unit	 Antenna (for Base Unit)	 1 Blue WAN Cable
 Base Unit Power Supply	 Base Unit Stand	 This Quick Installation Guide
DESK PHONE		
 1 or More Desk Phone(s)	 1 Handset per Desk Phone	 1 Handset Phone Cord per Desk Phone
 Desk Phone Power Supply	 1 Phone Cord per Desk Phone	WIRELESS ADAPTER  Desk Phone Wireless Adapter (optional)

Front Panel

The front panel contains lights called Light Emitting Diodes (LEDs) that indicate the status of the Xcelerator phone system.



Xcelerator IP Status Lights

Internet Connection Status

Phone Extension Status

PSTN Line Status

Fax Line Status

WLAN Status

Power Status

Connecting your Vertical Xcelerator IP Phone System

LED Name	Color	Status	Description
POWER	Blue	On	Power on.
		Off	Power off.
WIRELESS	Blue	On	Wireless LAN initialization success.
		Off	Wireless LAN is not present.
LINE (1-3)	Blue	On	PSTN Line is busy.
		Off	PSTN Line is idle.
TEL (Phone)	Blue	On	Phone is busy.
		Off	Phone is idle.
ETHERNET(1-4)	Blue	On	LAN connection detected.
		Off	LAN network connection not present
		Flashing	LAN activity present (traffic in either
WAN (Internet)	Blue	On	WAN connection detected.
		Off	WAN network connection not presen

These instructions are a guide to the installation and basic configuration of the Xcelerator phone system.

The Xcelerator phone system is designed to use your existing broadband data connection as well as the existing data wiring in your office. Where you don't have data wiring, you may use the Wi-Fi Adapter to connect Desk Phones to the base unit wirelessly.

AccessLine Communications

Owners Manual AccessLine 5-4-10

Before you begin

The Xcelerator phone system is designed to use your existing broadband data connection as well as the existing data wiring in your office. Where you don't have data wiring, you may use the Wi-Fi Adapter to connect Desk Phones to the base unit wirelessly. In order to begin using your new phone system and service, you need to perform the following two steps:

- **Install the base unit and phones.**
- **Go to www.accessline.com/activate to activate your phone lines.**

When selecting the location for the Base Unit please consider the following:

- Distance from your existing router - You will need to connect the Base Unit to your router with the 10' WAN cable (one is supplied).
- The range of the optional wireless adaptors for the Desk Phones is 40 feet and should be considered to ensure you have satisfactory coverage.

Assigning Extension Numbers to Phones

Each phone is assigned an extension starting with 100. Each Desk Phone box has the phone's extension number written on the outside of the box. You should have also received an email from AccessLine with the phone numbers associated with each Desk Phone and Cordless Phone

Installing the Base Unit

1. Assemble the Base Unit

Screw the Wi-Fi antenna (found inside the cardboard tube just below the hinge of the box) into the top of the base unit and attach the stand to the bottom of the base unit. Stand the antenna straight up for optimal coverage.



AccessLine Communications

Owners Manual AccessLine 5-4-10

2. Connect the Base Unit to your Existing router
Use the Blue WAN Cable and connect one end to the To Router port (located at the top of the base unit). Connect the other end of the blue WAN cable to an unused LAN port on the back of your existing router or modem/router.



3. Connect power to the Base Unit
Use the included power cord and plug one end into the Power In port on the back of the Base Unit and the other end into the wall outlet. Turn the Base Unit on by using the power switch located at the bottom. Move the switch in the direction of the SW.

IMPORTANT: Please wait 5 minutes after powering on the Base Unit before proceeding to install the Desk Phones.



Installing the Desk Phones


1. Assemble the Desk Phones

Use the included coiled handset cord and connect one end into the base of the handset and the other end into the handset port on the side of the phone labeled  (there is a handset port and a headset port)




2. Connect the Desk Phone to the Base Unit

For your convenience, you may connect the Desk Phones to the Base Unit using one, two, three or all four of the options listed below:

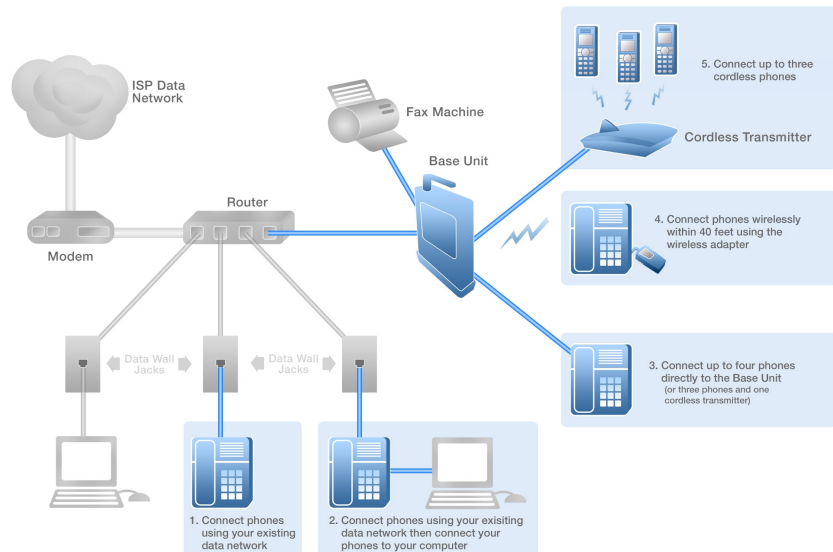


Note- The following setup options ARE NOT supported:

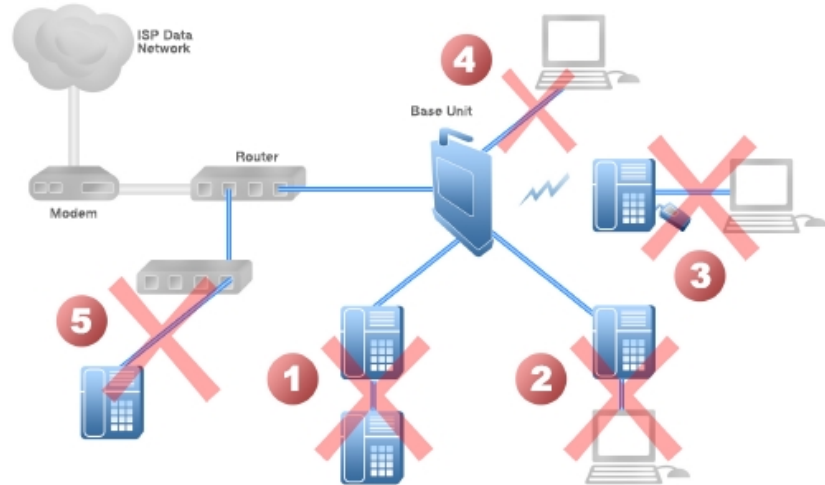

- 1- Connecting one phone to another
- 2- Connecting a phone to the base unit then connecting a PC
- 3- Connecting a phone to the base unit wirelessly and then connecting a PC
- 4- Connecting a PC to the base unit
- 5- Connecting a phone to a router that is connected to another router


Option 1: Connect phones to the Base Unit using your existing data network

Use the included phone cord and connect one end into the port on the back of the phone labeled  and connect the other end into any data port on your network (router, switch or wall jack).

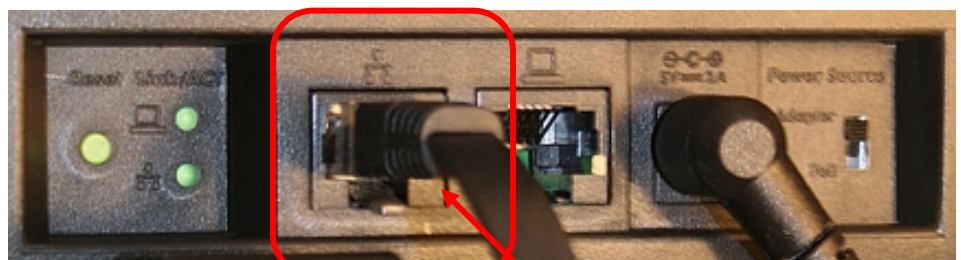

Option 2: Connect phones to the Base Unit using your existing data network then connect the phones to your computer

Follow the steps in option 1 but if you already have a computer using that wall outlet or router/switch port, unplug the computer, plug the phone into that port and plug your computer into the  port on the back of the phone.

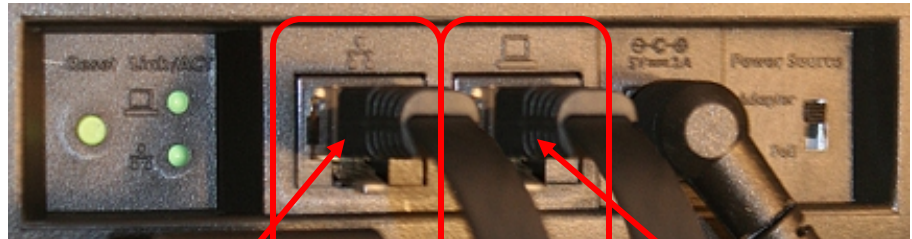


To your router or
wall jack

To your PC

Option 3: Connect up to 4 phones directly to the Base Unit or 3 phones if you are connecting a Cordless Transmitter.

Use the included phone cord and connect one end into the port on the back of the phone labeled  and connect the other end into one of the four green phone ports on the back of the base unit.

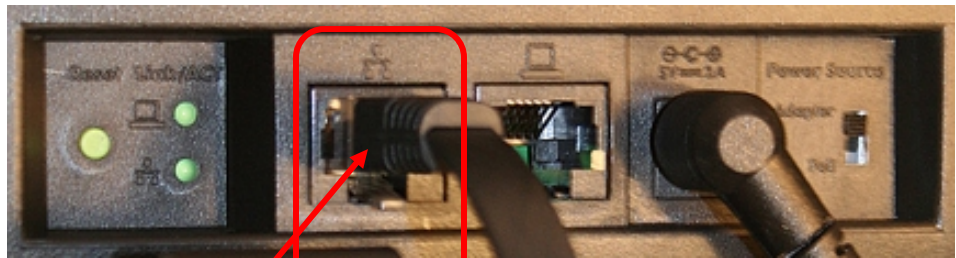

To the Base Unit



From the phone



Note

Up to 4 Desk Phones (or 3 Desk Phones if you have Cordless Phones) may be plugged into the base unit. All other phones must be connected to your existing data network or use wireless adapters.

Option 4: Connect phones wirelessly within 40' using the Wireless Adapter

The wireless adapter allows a desk phone to be used without a cord connecting it to the base unit. The range of the wireless adapter is 40 feet from the base unit.

The wireless adaptor utilizes the phone's power cord. Plug the phone's power cord into the short "power in" cord on the wireless adapter and then into the wall outlet. Then, plug the rectangle LAN plug from the Wireless Adapter into the back of the phone using the  port. Lastly, plug the long power cord with the silver tip coming from the Wireless Adapter into the power port on the back of the phone. Note:



To avoid interference or static on the phone, place the Wireless

AccessLine Communications

Owners Manual AccessLine 5-4-10


Note

Adapter away from the phone as shown.



3. Connect Power to the Desk Phone

Use the included power cord and plug one end into the back of the phone and the other end into the wall outlet. The phone will indicate that it is configuring itself. Once the phone has finished its configuration, it is ready to make and receive phone calls.

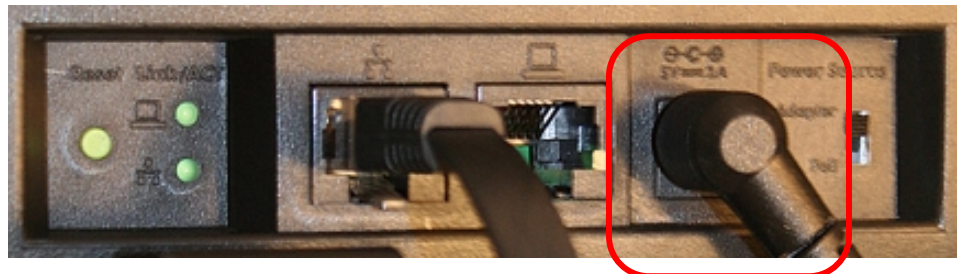**Note**

To the right of the power plug is a switch marked Power Source. The switch position must be set to Adapter. POE is not supported.

Connecting a Fax Machine

The Xcelerator phone system allows you to plug in your fax machine and receive and send faxes without having a separate fax line. Plug the existing phone cord from your fax machine into the yellow port on the back of the base unit marked "Fax".

NOTE- If you are having trouble sending or receiving faxes, please refer to "Using A Fax Machine" on page 40




Connecting your Existing Phone Line(s)

Skip this section if you do not intend to use existing phone lines

You may connect up to 3 existing phone lines (called CO lines) into the Xcelerator phone system. This is generally done when you first receive the system and are in the process of porting the phone number on that line to AccessLine. This way, you can continue to use that phone number and phone line with the Xcelerator phone system until the number has been ported. To do so, plug the existing phone line (s) into the orange line socket(s) labeled CO Line 1, CO Line 2 or CO Line 3 on the back of the base unit.



Any call coming in on any CO line will always ring at extension 100

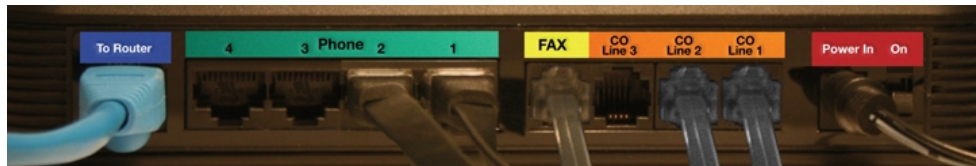

Setting up the Stand

Setting Up the Stand

Refer to the following steps and the associated illustration to setup the stand of the Desk phone.

Step A Move the big U-type frame (4) downward.

Step B Move the big U-type frame (4) downward to the flat level. The small U-type frame (5) will get flat concurrently.

Step C Move the U-type leg (3) upward.

Step D Seat the U-type leg (3) onto the big U-type frame (4) at about a 30°-angle position.

-Or-

Step E Pull-in the U-type leg (3) and seat it at about a 45°-angle position in the big U-type frame (4).

-Or-

AccessLine Communications

Owners Manual AccessLine 5-4-10

Step F Pull-in the U-type leg (3) and seat it at about 60°-angle position in the big U-type frame (4).



Wall-mounting a Desk Phone

The IP phone can be used on the desktop or mounted on a wall. Print the screw alignment template (on the next page) and tape it on the wall to position the 3 screws provided at the right place for the mount-holes on the phone.

Before mounting the IP phone to the wall, detach the handset and curled cord from the IP phone, then perform the following steps:

Step A On the back of the phone, find the latch (3) on the U-type leg and remove it.

Step B Remove the other latch (4).

Step C Remove the U-type leg (1). Retain the leg (1) and latches (2) for possible reuse in a desktop mode.

Step D Seat the big U-type frame onto the back of IP phone.


Step E Re-check that the power source switch is in the correct position.

Connect all cables to the jacks on the phone, and then mount the phone's holes (5 top, 6 left and 7 right) to the screws on the wall.

Step F Under the hook switch, find and press the cradle latch (8) to let it down. Then hang up the handset and re-attach the curled cord.



Screw Alignment Template

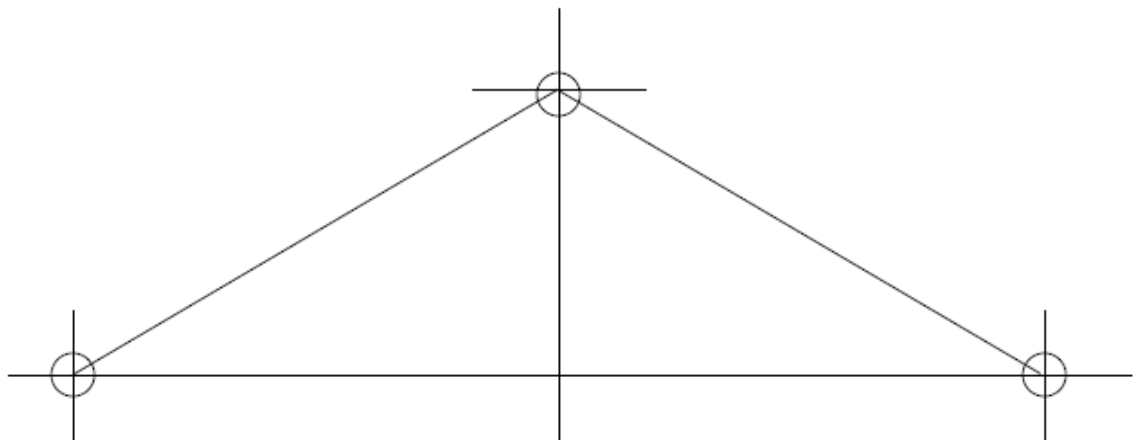

Connecting your Cordless Phones

Connecting the Cordless Transmitter:

1. Open the Cordless Transmitter box and remove the Cordless Transmitter, Power Adapter, and black Ethernet cable.

AccessLine Communications

Owners Manual AccessLine 5-4-10

Connect one end of the black Ethernet cable to the WAN connector on the rear of the Cordless Transmitter.



2. Connect the other end of the black Ethernet cable to any one of the green “Phone 1”, “Phone 2”, “Phone 3”, or “Phone 4” connectors at the rear of the Vertical Xcelerator Base Unit.



3. Connect the Cordless Transmitter power adaptor to the “DC 9-20V” connector at the rear of the Cordless Transmitter, and then plug the power adaptor into a 120 VAC power outlet.



Note

The connector labelled “LINE” at the rear of the Cordless Transmitter is not used. Do not connect anything to this connector.

Setting up the Cordless Phones

4. Open each Cordless Phone box and remove the Cordless Phone, Power Adapter, Battery, and Handset Cradle.

5. Connect the Cordless Phone Cradle power adaptor to the power connector on the rear of the phone cradle, and then plug the power adaptor into a 120 VAC power outlet.

AccessLine Communications

Owners Manual AccessLine 5-4-10



6. Insert the battery, and slide the battery door on the back of the phone.



7. Install the optional Belt Clip by inserting the rounded end of the Belt Clip Cover removal tool into the slot on the top of the phone. Slide the cover upwards. Then, slide the Belt Clip down where you removed the cover.



8. Place each Cordless Phone into its cradle. The handset will automatically power up, and the display will flash the message

AccessLine Communications

Owners Manual AccessLine 5-4-10

“Registering to Gateway”. This will also begin to charge the battery. It is recommended that you charge the battery fully before first use. **This takes approximately 10 hours.**



Note

You may see the message *“Please place handset in charger to start auto registration with the gateway. Restart the gateway to enable the registration mode”*. If so, you will need to remove the handset from its cradle for a few seconds and then return it to its cradle. The display will then flash the message *“Registering to Gateway”*.

Registering Cordless Phones:

9. Momentarily depress the reset button on the rear of the Cordless Transmitter. This will place the transmitter into “handset registration mode”, allowing it to automatically register with the new Cordless Handsets for a period of 5 minutes.



Within a few minutes the Cordless Phone should complete their registration with the Cordless Transmitter and the display will show “Ext 117”, “Ext 118”, or “Ext 119”, depending on how many handsets you have purchased.

Activating the Service

You have installed your phone system and now it is time to activate your phone lines. Go to www.accessline.com/activate

1. Enter the MAC address found on the back of the Vertical Xcelerator base unit



2. Enter the ZIP Code of your location

Once you have activated your service, you may start making and receiving calls. This action also starts the billing for your phone lines.

NOTE- This action only enables the billing for your phone lines. Billing for installation fees, equipment and enhanced features such as Automated Attendant or Webfax begin when you purchase the service.

3. Using Your Vertical Xcelerator Phone System

System Description

- The Xcelerator phone system comes equipped with up to 8 IP Trunks for making and receiving phone calls
- The Xcelerator phone system can also accommodate up to 3 CO lines (traditional phone lines).
- The Xcelerator phone system can accommodate up to 17 Desk Phones. Up to 4 Desk Phones can be wired to the base unit (or three phones if you are using the Cordless Transmitter and cordless phones). All other phones must either use the Desk Phone Wireless Adapter to connect wirelessly to the base unit or connect to an existing router on your network.
- The Xcelerator phone system accommodates up to 3 cordless phones
- The Xcelerator Desk Phones and Cordless Phones have simple-to-use menu-driven interface.

Introduction to your Vertical Xcelerator Phones

The Vertical Desk Phone is designed to simplify user configuration and operation of the system and calling features.

Getting Started

This section of your Owner's Manual is your guide to using the Xcelerator phone system and its features. It also explains how to program system settings using your Desk Phone.

System Desk Phone

Introduction to your system Desk Phone

The Desk Phones are highly featured display telephones for use with your Xcelerator system.

It features a 3-line display that contains prompts and menus with selectable options. This unique menu-driven interface makes the system simple to use, and no codes are needed to program and activate features.

System settings are also programmed via a Desk Phone using the intuitive menu-driven interface, without the need for special codes. The Desk Phone is equipped with a speakerphone, so you can make calls, receive calls and use its features without lifting the handset.




Using the Desk Phone display

The Desk Phones' display presents various prompts and information, and provides selectable options to the extension user.


Read this section to learn how to navigate in the menus of your Desk Phone.

You can use the LCD menus to configure most settings of your Desk Phone.

Press the LEFT soft key to start the menu selection process.

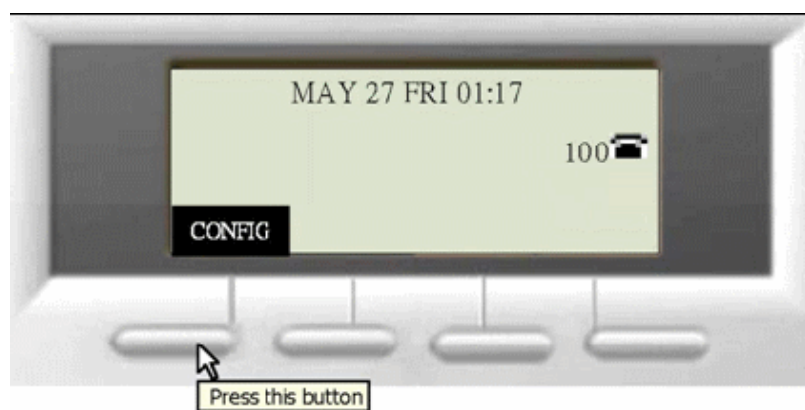

This is the first display shown when you press the LEFT soft key.

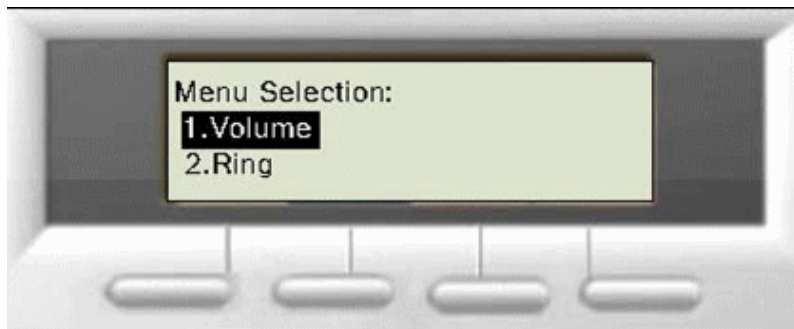

Navigate in the Menu

Use the Navigator Control  key to scroll to the desired item.



Press the checkmark (OK)  key to select the appropriate item.



Pressing the checkmark (OK)  key again will confirm and save the setting of the item you selected, and cause you to return to the previous menu. Thereafter, the menu will roll back to the upper level of the menu tree. You can also press the LEFT arrow of the Navigator Control key to roll back to the upper level of the menu tree without causing the system to resave.

Numeric and Alpha Characters

AccessLine Communications


Owners Manual AccessLine 5-4-10

You can enter numeric or alphabetic characters in certain menus, such as in the Phone Book. When you are on a menu that accepts characters, you will see "ABC" above the left soft key. Press the LEFT soft key to cycle through the options of ABC, 123, and abc. These options represent characters in upper case, numeric digits, and characters in lower case. While entering an item, you can switch between the three options to use upper and lower case characters as well as numbers.

To enter alphabetic characters, select ABC or abc with the LEFT soft key, then continue to press the dial pad button that has the character you want until the desired character appears. The display will cycle through all of the characters associated with that button.

Saving the Configuration

Some changes are saved immediately as you change settings. All settings will be saved when you leave the Menus. You will see "Saving change ... please wait" on the display.

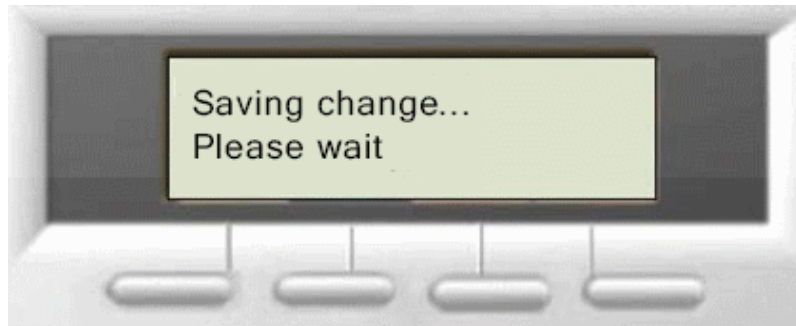


Using the Speakerphone Key

You can use the Speakerphone Key to have a conversation without having to lift the handset. Press the Speakerphone Key to go off-hook, as if the handset were lifted with the Desk Phone speaker and microphone replacing the handset. Pressing the key again goes back on-hook, as if the handset were replaced. You may also use the Desk Phone with a headset.

The Speakerphone key has a green light, which is lit whenever the Speakerphone Key has been pressed to go off-hook or to turn on the speaker.

Volume Adjustment Using the Volume Keys on the Phone

Use the Volume Control button to adjust the volume of calls. The Volume Control button is used under the following conditions:

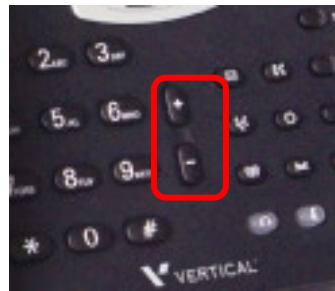

When using the handset ... use the Volume Control button to adjust the volume level that you experience when using the handset.

When using speakerphone mode ... use the Volume Control button to adjust the volume level that you experience when using the speakerphone.

When using a headset ... use the Volume Control button to adjust the volume level that you experience when using the headset..

When the phone is ringing ... use the Volume Control button to adjust the ringing volume.

For more volume adjustment features, see Additional Volume Adjustments on page 38



Note

The Volume level increases/decreases by one step for every press of the Volume Key.

Using the Mute Key

The Mute Key can be pressed when you are using the handset or in Speakerphone Mode. When pressed, the other person on the call cannot hear you. The Mute Key has a red light, which is lit when Mute is active.

The Ringing / Message Waiting Light:

There is a red light on the top of the Desk Phone. This light flashes when there is an incoming call. It also lights up when a voice message has been left in your Voice Mailbox.

Using the Function Keys

Phone Button	What it Does
	Press this button to setup your voicemail box, enter a personal greeting for your callers, or to listen to your voice messages. See the Desk Phone user guide for instructions on how to use the voicemail system.
	Press this button to view your personal phone book. See the Desk Phone user guide for instructions on how to add, edit, and use the personal phone book.
	Press this button to redial the last number.
	Press this button to forward a call to another internal extension or another phone number outside of the office.
	Press this button to conference calls together.
	Press this button to turn the speakerphone on or off.
	Press this button to mute and unmute the microphone on the speakerphone and the handset.
	Press this button to put an active call on hold; pressing this button again while the call is on hold will make it active again
	Press any of these 4 buttons to park a call. Once the call is parked, the same button on all other desk phones will start flashing green. To pick up a parked call, anyone on any phone will press the flashing button to be connected with the parked call.
	Press this button to use a headset. You need to plug in a headset to use this feature. There is a headset jack on the left side of the phone right next to where the curly handset cord plugs in.
	These are the phone navigation buttons.
	This is the “accept” button for actions on the phone navigation keys.

Phone Button	What it Does
	This is the “left” navigation button.
	This is the “top” navigation button.
	This is the “bottom” navigation button.
	This is the volume control; it controls the volume for the ringer, the speakerphone, and the handset and headset volume. Pressing the “+” key raises the volume and pressing the “-” lowers the volume.

Desk Phone– Basic Call Features

Placing and Answering Calls

Answering a call

Each phone has been assigned a phone number from AccessLine. When that phone number is dialed, the phone associated with that phone number will ring.

Answer a call that is ringing on the Desk Phone using the handset:

1. Pick up the handset

Answer a call that is ringing on the Desk Phone using speakerphone

1. Press the speakerphone key  or the “Answer” softkey under the display

Placing a call

You may dial 7, 10, 11-digit phone numbers or international phone numbers. Additionally, you may call any other 3-digit extension.

Make an external call

1. Pick up the handset or use the speakerphone button
2. Dial the number

Make an internal call

1. Pick up the handset or use the speakerphone button

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
2. Dial the extension number

Handling Multiple Calls

You can make or receive two simultaneous phone calls on your Desk Phone. These can be two different phone calls or the calls can be joined in a conference. If you are on a call and have another call on hold, or you are on a conference with two callers, and a third call comes in, you will hear a short notification beep and have a few seconds to drop one of the two active calls to pickup the third call. If you do not drop one of the first two calls, the third call will be sent to your voicemail.

Answering a second call

If you are on a call and another call comes in to your phone you will hear a tone from the phone and see the word “calling” on the top line of the display. To answer the call:

1. Place the first call on hold by using the hold key  or use the hold soft key below the display
2. Press the down arrow to view the second call on the display screen. The phone will begin ringing
3. Answer the call by using the answer soft key or by picking up the handset
4. You may switch between calls by using the up and down arrows and using the resume soft key to connect to that call

Placing a second call

While on a call, you may place that call on hold and make a second call. To do so:

1. Place the first call on hold by using the hold key  or use the hold soft key below the display
2. Press the down arrow to access a second line
3. Dial the phone number or 3-digit extension number. You will be connected to that party
4. You may switch between calls by using the up and down arrows and using the resume soft key to connect to that call



Note

If a number on an incoming call matches a number in the system speed dial list, the name in the list will be displayed.

Call Hold

To place a call on hold

When you place a call on hold, the caller will be presented with the standard phone system hold music.

1. While on the call press the Hold key  or select the “hold” soft key the display. When an external call is placed on hold, the caller is presented with hold music.

-
2. To retrieve the call, press the Hold key or the soft key under the RESUME display.



Note

If an extension has two calls on hold, use the up or down arrow keys to select the line then press the “resume” soft key to connect to that party.

Call Transfer

To Transfer a call

You can transfer calls from your Desk Phone to another Desk Phone in your office or to any other phone number outside your office. For example, if you receive a call from a coworker in the office, you can transfer that call to another coworker in the office or on his cellular phone outside the office. You can make both supervised and unsupervised call transfers. A supervised call transfer is when you wait until the other party answers and you tell them you want to transfer a call to them. An unsupervised call transfer is when you just transfer the call without waiting to tell the other party you want to transfer a call to them.

To Do an Unsupervised Call Transfer- Used when you have one OR two calls on your phone.

Note: *The following instructions assume you are on a call and that your phone only has one call active.*

1. Press TRANSFER key 
2. Your caller will be placed on hold
3. When you hear the dial tone, dial the desired extension number or phone number
4. Once the call has transferred, your line will hang up and the extension you transferred to will ring and connect to your caller. Do not hang up the phone until the line has disconnected.

To Do a Supervised Call Transfer- Used when you have ONLY ONE call on your phone

Note: *The following instructions assume you are on a call and that your phone only has one call active.*

1. Place the caller on hold by pressing the hold key 
2. Press the down arrow  to access a second line
3. When you hear the dial tone, dial the desired extension number or phone number you wish to transfer the call to.
4. Announce the call to the new party
5. To initiate the transfer, press TRANSFER key 

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
6. Your line will hang up and the extension you transferred to will ring and connect to your caller



Note

Transferring an external call to an external number ties up two lines. If you wish to avoid tying up two lines, please refer to "If your phone has 2 calls active, please refer to "Using Network-based Call Transfer"

Using Network-based Call Transfer

This call transfer method is used when you want to transfer a call without tying up two lines on your phone system. It uses the AccessLine network to transfer the call instead of the phone system.

1. Receive a call on your Desk Phone
2. Touch #5 to start the transfer (this will place your caller on hold)
3. At the dial tone, enter the extension or phone number you want to transfer the caller to
4. When the transfer party picks up the phone, touch #5 again.
5. All three of you will be connected.
6. Hang up and the two parties are connected (without tying up any of your lines)



Note

If the transfer party does not pick up the phone, touch #6 to return to the original caller.

Call Park

To Park a call

Parking a call is very similar to putting a call on hold. The key difference is, when you put a call on hold you can only retrieve the held call from the phone that put the call on hold. With Call Park, you can put a call on hold and pick it up from ANY phone. Each phone has 4 park positions located on the far right of the phone, labeled 1 through 4. Up to 4 calls can be parked system-wide at any given time. Each phone can park up to 2 calls at a time.

1. While on a call, press any one of the 4 PARK keys  not currently in use
2. The caller will be placed on hold and you will see the word "HOLD" on your phone (if two phones attempt to park a call

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
- on the same park button, the first phone will be allowed to park the call, while the second phone will be rejected)
 3. The selected park button will flash on all phones (for example if you parked a call on Park 1, the Park 1 button will flash on your phone and all other phones)
 4. To pickup the parked call, press the flashing park button on any phone .



When a call is parked on a phone, one of the lines on that phone is used until the call is picked up by another phone. So, if you park one call, you may only receive/ place one more call on that phone until the parked call removed. If you park 2 calls on one phone, you cannot make or receive calls on that phone until at least one of the parked calls is picked up.

Paging (Intercom)

To page to all phones

Paging allows you to speak to all phones at the same time through their speaker phone. If you pick up the handset during a page, you will hear the message in the handset. Paging is used to make announcements such as "Jim, you have a visitor in the lobby" or to let people know about a parked call such as "Susan, you have a call waiting on Park 2". Paging will only notify phones not in use or not set to DND.

1. Either pickup the handset or uses the speaker phone
2. Dial 400.
3. Make your announcement which will be heard on all phones (except phones set to DND or phones in use).
4. Hang up the phone when finished

Answering a Page

1. Either pickup the handset or uses the speaker phone
2. Press the "Answer" soft key on the phone display
3. Talk directly back to the person who initiated the page

Rejecting a Page

1. To ignore a page, press the "Reject" button



NOTE- If you have a call parked or on hold, either use the down arrow, pick up the handset or press the speaker phone key before dialing 400. If you have two calls on hold/parked, you cannot use paging.



NOTE- If you dial 400 and all phones are in use, your phone will display "Not Acceptable Here" and you will hear a 6 beep warning to let you know the paging is not currently available.

Forwarding Incoming Calls

To forward all calls from your extension

Your Desk Phone supports three types of call forwarding;

Forward all calls- Forwards all calls to the phone number or extension of your choice

Forward when busy- Forwards calls to voicemail when your phone is busy and cannot be changed

Forward when not answered- Forwards calls to voicemail when your phone is not answered and cannot be changed

Enable Forward All Calls on Your Phone

1. Press the CONFIG button under the display
2. Scroll Down using the DOWN arrow on the navigation pad until "Call Forward" is displayed.
3. Press the  Key.
4. Select "Always Forward" and press the  Key.
5. Select "Toggle" and press the  key
6. "Always Forward Toggle" will be displayed. Press the up or down arrows on the navigation pad to set this option to "On"
7. Press the  Key
8. Select "Forward Number" and press the  Key.
9. Enter the phone number or extension number
10. Press the  Key.
11. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
12. Press the  Key.

Cancel Forward All Calls on Your Phone

1. Press the CONFIG button under the display
2. Scroll Down using the DOWN arrow on the navigation pad until "Call Forward" is displayed.
3. Press the  Key.
4. Select "Always Forward" and press the  Key.
5. Select "Toggle"
6. "Always Forward Toggle" will be displayed. Press the up or down arrows on the navigation pad to set this option to "Off"
7. Press the  Key
8. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.

-
9. Press the  Key.

Conference Calls

The Desk Phones will allow you to talk with two different people at the same time. For example, if you are on a phone call with one person and want to also talk to another person at the same time on the same call, you can join these two conversations together in a conference. If a third call comes in to your phone while you are on a conference call, you will hear a notification beep and you will have a few seconds to drop one of the calls and pick up the third call. If you don't drop one of the two active calls, the third call will be forwarded to your voicemail.

To hold an Internal Conference

1. Pick up the handset or use the speakerphone button
2. Dial the extension number and wait for the called party to answer.
3. Place that party on hold
4. Use the down arrow to access a second line
5. Dial the phone number of the next party
6. Press the Conference key to join the caller and the two parties together

To hold an External Conference

1. Pick up the handset or use the speakerphone button
2. Dial the phone number and wait for the called party to answer.
3. Place that party on hold
4. Use the down arrow to access a second line
5. Dial the phone number of the next party
6. Press the Conference key to join the caller and the two parties together

Using your Desk Phone with a headset

Your Desk Phone is equipped with a socket for a Headset located on the Desk Phone below the hand set cord. The Desk Phone will work with any amplified headset.

The following list shows you how to switch between handset, headset and speakerphone

Handset to speakerphone --You are using the handset and want to switch to speakerphone mode. Press  and place the handset on hook.

NOTE: The voice will not switch to speakerphone until you place the handset on hook.

Handset to Headset -- You are using the handset and want to switch to the headset mode. Press the headset button and place the handset on hook.

NOTE: The call will not switch to headset mode until you place the handset on hook.

Speakerphone to Handset --You are using speakerphone mode and want to switch to the handset. Lift the handset off hook and the call will switch to the handset immediately.

Speakerphone to Headset --You are using speakerphone mode and want to switch to the headset mode. Press the headset button and the call will switch to headset mode immediately.

Headset to Handset -- You are using the headset and want to switch to handset mode. Lift the handset off hook and the call will switch to the handset immediately.

Headset to Speakerphone --You are using the headset and want to switch to speakerphone mode. Press the speaker button and the call will switch to speakerphone immediately.

Additional Call Features

Redial

The Redial function places a call to the last number dialed. To use the Redial function,

1. Pick up the handset or use the speakerphone key 
2. Press the redial button

Mute

The mute feature allows you to hear the other party, but they cannot hear you. To mute the handset or speakerphone during a call:

1. Press the mute key . The Mute key will light to indicate that the microphone has been muted.

Press the MUTE button again to re-enable the microphone.

Call Log (Call Record)

The Desk Phone automatically keeps a list of received, dialed and missed calls. You can scroll through the various lists to review these calls and see when they were received or made. You can also save, edit and use numbers on these lists. For example, if you see that someone called while you were out, but did not leave a message, you can return their call right from the missed calls list, and if you like, you can then edit and save that number to your personal phone

book. The Desk Phone stores the last ten numbers received, missed and dialed.

To Display the Call Log

1. Press the CONFIG button under the display
2. Use the DOWN arrow of the navigation pad to scroll to CALL RECORD.
3. Press the  Key.
4. "Call Record Type" will be displayed. Make your choice from the options for Dialed Calls, Missed Calls, or Received Calls
5. Press the  Key.
6. The calls stored in the chosen option will be displayed.
7. When done, press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
8. Press the  Key.

Speed Dial list

Up to ten Speed Dial Numbers can be programmed per phone.

Program system speed dial list – numbers and names

1. Press the CONFIG button under the display
2. Use the DOWN arrow of the navigation pad to scroll to SPEED DIAL
3. Press the  Key.
4. "Speed Dial [0 – 9]:" will be displayed
5. Press the Up or Down arrow, "Speed Dial Setting" will be displayed.
6. Press the UP or Down arrow to select the Speed Dial entry and select "EDIT"
7. Enter the appropriate data
8. Press the  Key
9. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
10. Press the  Key

When prompted for an entry, press 2 once for 2, twice for A, three times for B, four times for C; press 3 once for 3, twice for D, three times for E, four times for F; and so on.

Wait two seconds for the screen cursor to move on before entering the next letter or press the "NEXT" key to move to the next character or numeral.

On completion of the entry, press the  Key.
Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
Press the  Key.

Dial a number in the system speed dial list

-
1. Pick up the handset or press the speakerphone key 
 2. Press the SPD Softkey
 3. Enter the speed dial number
 4. Press the  key

Personal Phone Book

The Desk Phone can store 400 numbers in a Personal Phone Book. Numbers can be dialed directly from the phone list and you can edit then save received or missed calls to this personal directory from the received, missed and dialed call lists. In addition, if you receive a call on your Desk Phone from a number that is in your personal phone book, the calling name that you entered in the directory is displayed.

Program your Phone Book list

Press the Directory key or the DOWN arrow on the navigation pad to access the Phone Book.

1. Select the entry you wish to program. Up to 400 entries are available per Desk Phone
2. Press the "EDIT" button under the display
3. Select "Name", "Number", or "Ring"
4. Enter the appropriate data for the selection.

When prompted for an entry, press 2 once for 2, twice for A, three times for B, four times for C; press 3 once for 3, twice for D, three times for E, four times for F; and so on.

For a 1, press 1 once, for a space, press 1 twice, for a period, press 1 three times and for a comma press 1 four times.

5. Wait two seconds for the screen cursor to move on before entering the next letter or press the "NEXT" key to move to the next character or numeral.
6. On completion of the name, press the  Key.
7. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
8. Press the  Key

Dial a number from your Phone Book

1. Press the Directory key or the DOWN arrow on the navigation pad to access the Personal Directory.
2. Select the entry you wish to program. Up to 400 entries are available per Desk Phone.
3. Press the "DIAL" button under the display.

Auto Answer

Auto Answer, when set, will ring the called station two times and then automatically answer the call in speakerphone mode using the speakerphone.

Set Auto Answer

1. Press the CONFIG button under the display.
2. Use the DOWN arrow of the navigation pad to scroll to AUTO ANSWER.
3. Press the ☒ Key.
4. "Auto Answer: Off" will be displayed.
5. Using the Up or Down arrow, select "On".
6. Press the ☒ Key.
7. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
8. Press the ☒ Key.

Cancel Auto Answer

1. Press the CONFIG button under the display
2. Use the DOWN arrow of the navigation pad to scroll to AUTO ANSWER.
3. Press the ☒ Key.
4. "Auto Answer: On" will be displayed
5. Using the Up or Down arrow, select "Off"
6. Press the ☒ Key.
7. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
8. Press the ☒ Key.

Caller Blocking

Up to ten phone numbers can be blocked from reaching your phone when a caller attempts to call you from one of these numbers.

To Set Call Blocking from the Desk Phone

1. Press the CONFIG button under the display
2. Use the DOWN arrow of the navigation pad to scroll to BLOCKING LIST.
3. Press the ☒ Key.
4. "Blocking List:" will be displayed. Enter a digit from 0 to 9.
5. Press the ☒ Key.
6. The options Del (Delete), Edit and Cancel will be displayed.
7. To enter a number, use the press the left softkey until NUM (for numeral) appears. Make the entry.
8. Press the ☒ Key.
9. When done, press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
10. Press the ☒ Key.

Distinctive Ringing

Distinctive ring tones can be selected allowing adjacent users to tell which phone is ringing. Distinctive Ringing is set per phone and is for external calls only. You can change the ring tone of any phone through the LCD menu. Ring tones are named for various countries and the ring tones emulate the sound of a ringing phone in that country..

To set Distinctive Ringing from the Desk Phone

1. Press the CONFIG button under the display
2. Use the DOWN arrow of the navigation pad to scroll to RING.
3. Press the  Key.
4. "Ring Tone:" will be displayed. Scroll to the country tone you wish to set
5. Press the  Key.
6. You will be returned to the previous menu

Inbound Caller ID

Two levels of Call ID are available. By default the phone number of the caller (providing it is not a blocked call) will be displayed on the ringing desk phone.

Optionally, you may purchase Caller ID Name and Number. If you have purchased this optional service, the name of the caller and phone number will scroll across the second line of the Desk Phone's LCD screen. The information will continue to scroll until the phone has been answered.



You must purchase Caller ID with Name as an optional feature in order to see the callers name displayed on your phone.

Extension Set-Up options

Do Not Disturb

A Desk Phone can be set to Do Not Disturb (DND). When a phone is set to DND, any internal or external call will immediately route to that phone's voicemail box without ringing the phone.

Set DND

1. Press the CONFIG button under the display.
2. Use the DOWN arrow of the navigation pad to scroll to DND.
3. Press the  Key.
4. "Do Not Disturb: Off" will be displayed.
5. Using the Up or Down arrow, select "On".
6. Press the  Key.
7. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
8. Press the  Key.

Cancel DND

1. Press the CONFIG button under the display
2. Use the DOWN arrow of the navigation pad to scroll to DND
3. Press the  Key.
4. "Do Not Disturb: On" will be displayed
5. Using the Up or Down arrow, select "Off"
6. Press the  Key.
7. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
8. Press the  Key.

Additional Volume Adjustments

In addition to using the volume keys on the phone you may adjust the following volume levels through the Config softkey on your phone:

Volume Control	Function
Ring Tone Volume	Controls the volume level of the phone ring
Handset Speaker	Controls the volume level to your ear when using the handset
Handset Mic	Controls the volume level to the other party when using the handset
Speakerphone	Controls the volume level coming out of the speakerphone
Speakerphone Mic	Controls the volume level to the other party when using the

AccessLine Communications

Owners Manual AccessLine 5-4-10

	speakerphone
Headset Speaker	Controls the volume level to your ear when using a headset
Headset Mic	Controls the volume level to the other party when using a headset

Program the Phone Volume feature from phone:

1. Press the CONFIG button under the display
2. "Volume" will be displayed as the first menu item
3. Press the ☒ Key.
4. Then select the Volume Control option you desire
5. After making your selection, use the UP and Down arrows to adjust the volume
6. Press the ☒ Key so save your change

Administrator Functions

You may enter the Administrator menus through any desk phone. Once you have accessed the Administrator menu, you may add user names for each phone, lock specific phones, change the Administrator password and reboot the phone

Changing the Administrator Password

The default Administrator Password is 9999. You may change it to any number between 1 and 9 digits.

Change the Admin Password from the desk phone

1. Press the CONFIG button under the display
2. Scroll Down using the DOWN arrow on the navigation pad until "Admin" is displayed.
3. Press the ☒ Key.
4. Enter the Admin Code- 9999 is the default
5. Press the ☒ Key.
6. Select Account from the menu
7. The menu will display Account Type: User
8. Press the ☒ Key.
9. Use the down arrow key to select Password
10. Press the ☒ Key.
11. Enter the new numeric password
12. Press the ☒ Key.
13. Reenter the new numeric password when prompted
14. Press the ☒ Key.

Phone Lock/Unlock

The desk phone lock feature is used to prevent calls from being made from a specific extension. A locked extension will continue to receive incoming calls. This feature can be enabled from the Desk Phone keypad within the Admin menu.

Program the Phone Lock feature from a desk phone

1. Press the CONFIG button under the display
2. Scroll Down using the DOWN arrow on the navigation pad until "Admin" is displayed.
3. Press the  Key.
4. Enter the Admin Code- 9999 is the default
5. Press the  Key.
6. Select Phone Lock from the menu
7. "Phone lock: Off " will be displayed. Press the up or down arrows on the navigation pad to set this option to "On".
8. Press the  Key
9. Press the LEFT arrow on the navigation pad until the display "Quit Confirm: Yes" appears.
10. Press the  Key.

Unlocking a Phone

1. The desk phone will show: Phone Locked... PIN:
2. Enter the Admin Code-9999 is the default
3. The phone will unlock

Entering a User Name for a Phone

Each desk phone can display the name of the user on the LCD screen. The name will display on the phone next to the extension number. The User Name does not transfer with the call or show other internal users who is calling. This feature can be enable or disabled from the Desk Phone keypad within the Admin menu.

Program a name from the desk phone

1. Press the CONFIG button under the display
2. Scroll Down using the DOWN arrow on the navigation pad until "Admin" is displayed.
3. Press the  Key.
4. Enter the Admin Code- 9999 is the default
5. Press the  Key.
6. Select User Name from the menu
7. Press the  Key.
8. Press the 2 key once for 2, twice for A, three times for B and four times for C. Use all number keys in this fashion.
9. Use the Next soft key to move the curser or the Backsp key to move back

-
10. Press the  Key when finished

Using Voicemail

The phone system can record up to 20 hours of voicemail, shared between all users of the system. Each Desk Phone has its own personal voicemail box on the phone system. Each user can record his or her own personal greeting for the voicemail box. Voicemail is not automatically deleted by the system and must be manually deleted by each user.

Messages can be retrieved from the user's Desk Phone or by calling the Voicemail Access Phone number specific to your phone system. When there is a message left in the user's voicemail box, the user's Desk Phone message waiting indicator will flash until the user retrieves his or her messages.

Record a personal greeting

1. Press the fixed key with the envelope graphic, or dial 200.
2. Enter your password when prompted (0000 by default).
3. Select "3" from the menu options.
4. Follow voice prompts to record and check your greeting.

Turn on your voicemail

No Answer Forward to the phone's voicemail box is automatically set when a voice mailbox is allocated to the extension. So, if the phone does not answer, it will automatically forward calls to extension 200 (which is the voicemail box for each phone)

Retrieving messages from your Desk Phone

1. Press the fixed key with the envelope graphic, or dial 200.
2. Enter your password when prompted (0000 by default).
3. Press 1 to retrieve voice messages

The system will say, "You have _____ messages"

To listen to voice messages, press 1

To delete all messages, press 2

When finished, press #

After pressing 1 to listen to messages

To replay the message, press 1

To delete this message, press 2

To skip to the next message, press 3

To forward to another mailbox, press 4

When finished, press #

Retrieving messages when you are away from the office

-
1. Dial your Voicemail Access Phone Number which was sent to you via email with all of your other system phone numbers.
 2. After 3 rings, you will hear "If you are a user on this system, touch star to continue"
 3. Press the * key
 4. You will then be prompted to enter your mailbox number (which is the same as your extension number (100, 101 etc) and voicemail box PIN
 5. Once you have entered a valid extension number and PIN, you will have full access to your voicemail box and all of its functions.
 6. Press 1 to retrieve voice messages

The system will say, "You have _____ messages"

To listen to voice messages, press 1

To delete all messages, press 2

When finished, press #

After pressing 1 to listen to messages

To replay the message, press 1

To delete this message, press 2

To skip to the next message, press 3

To forward to another mailbox, press 4

When finished, press #

Change your Voice Mailbox Password

1. Press the fixed key with the envelope graphic, or dial 200.
2. Enter your password when prompted (0000 by default).
3. Press 2
4. Enter the new 4-digit PIN when prompted.
5. Press 1 to confirm the entry

Forward Voicemail Messages

A user can forward a voicemail from his voicemail box to another voicemail box on the Xcelerator after listening to it.

- Press the envelope key or dial 200
- Enter your password when prompted (0000 by default)
- Press 1 to listen to your message(s)
- When prompted, press 4 to forward the message to the desired extension

Change the Number of Rings Before Voicemail Picks Up

1. Press CONFIG button under the display
2. Use the DOWN arrow  of the navigation pad to scroll to "Call Forward"
3. Press the  Key.
4. Use the DOWN arrow  of the navigation pad to scroll to "No Answer Forward"
5. Press the  Key

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
6. Use the DOWN arrow  of the navigation pad to scroll to "No Answer Time"
 7. Press the  Key
 8. Use the BACKSP softkey to remove the number of seconds displayed then, enter the number of seconds your phone should ring before the voicemail answers (one ring is approximately 4 seconds)
 9. Press the  Key.

Using a Fax Machine

To send and receive faxes, plug the phone cord from your fax machine into the yellow port marked "Fax" on the back of the Vertical Xcelerator IP. The fax machine must be plugged directly into the back of the base unit, and cannot be connected to your router or LAN.

If you are having problems with faxing, you may need to refer to your fax machine owner's manual and adjust the configuration on your fax machine. For best performance with Digital Phone Service:

If your fax machine has an "ECM" ("Error Correction Mode") feature, please disable this function,
Check your fax machine's speed (sometimes called "Baud Rate"), and set it to 9600 or lowest possible speed.



4.

Cordless Phones

Introduction

The Vertical Xcelerator phone system supports up to 3 Cordless Phones. The Cordless Phones use a Cordless Transmitter to connect them to Vertical Base Unit. The Cordless Transmitter is plugged into any one of the 4 phone jacks on the back of the Vertical Base Unit. You may only have up to 3 simultaneous calls going with your 3 Cordless Phones (for example, 3 cordless phones may each have one phone call, or one cordless phone can be on a call with one call on hold, and one other cordless phone can be on a call).



Cordless Phone Features

Display

- 128 x 128 pixels, 65K color support, backlight
- Graphical menu system

Call and Phone Features

- 12 numerical keys, 5 navigation keys, 2 function keys
- Auto answer option (when Cordless Phone is lifted from the charger)
- Key lock option

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
- Call forward - all, busy, no answer
 - Call timer
 - Call transfer and call hold
 - Call waiting indication
 - Call park/pickup
 - Caller ID with name from phone book
 - Distinctive ringing
 - Call log of incoming/outgoing/missed calls
 - Call return (from call log)
 - Customizable phone settings
 - Intercom
 - Contacts List (up to 200 entries and 4 numbers per entry)
 - Voicemail
 - Speed dial support
 - Three-way conferencing
 - Call hang up (upon return to charging cradle)
 - On-hook dialing (pre-dial numbers before pressing off-hook button)

Audio Features

- Mute (disable microphone)
- Receiver volume control
- Ring tone melodies
- Ringer volume control
- Key sounds (click, DTMF, and special tones)
- Low battery and out-of-range audible warnings
- Speakerphone
- Headset jack (2.5 mm)

Cordless Handset Battery

- Li-Ion battery pack
- Standby Time (out of cradle): Approximately 40 hours
- Talk Time: Approximately 4 hours
- Recharge Time (in cradle): Approximately 4 hours
- Low Battery Indicator: The battery level indicator (at the upper right of the cordless handset display) will change to red when there is approximately 15% battery life remaining.

Other Cordless Phone Features

- Hearing aid compatible
- Automatic registration
- Status indicators in idle mode (signal, battery level, date and time)
- Message waiting indicator (missed calls, voicemail)

Getting Started

The Cordless Phones and Cordless Transmitter are shipped to you pre-configured. You do not have to do any configuring or programming of the Cordless Phone. It will already have an extension number which can be called from any other Cordless Phone or Desk Phone as well as a phone number that can be

AccessLine Communications

Owners Manual AccessLine 5-4-10

called from any phone. This section describes the function of the lights on the Cordless Transmitter and some of the initial phone startup screens.

Cordless Transmitter Basics

The Cordless Transmitter plugs into the Vertical Base Unit and provides wireless connectivity to the Cordless Phones. The Lights on the front of the Cordless Transmitter indicate the current status. After the initial installation and activation, the POWER and I-NET and VOIP lights should remain lit.

The following describes the indicator lights, ports and buttons on the Cordless Transmitter which, in turn, provides information on the operating state.



Label	Description
POWER	Remains lit when the power is on.
I-NET	Remains lit when the Cordless Transmitter has an IP address and has been connected to the Vertical Xcelerator Base Unit. Flashes during boot.
VOIP	Remains lit when the Cordless Transmitter is connected to the Vertical Base Unit and the Vertical Base Unit is communicating with the AccessLine Network
CALL	Remains lit when a call is in progress
RESET (back of unit)	Press momentarily to reboot the unit, activate configuration changes, and enable Cordless Phone registration mode. Press and hold 15 seconds to reboot with factory default settings. All front panel lights come on when a factory restart is initiated. <i>NOTE: Any custom configuration settings are lost during a factory default.</i>
DC 9-20V (back of unit)	Indicates where the power plug connects

AccessLine Communications

Owners Manual AccessLine 5-4-10

LAN (back of unit)	Indicates where the Ethernet cable connects (the other end of the Ethernet cable connects to the Vertical Xcelerator Base Unit)
LINE (back of unit)	Indicates the Telephone Line Connection port (PSTN), which is not used.

Registering a Cordless Phone

Each Cordless Phone must be registered with your CORDLESS TRANSMITTER before it can be used. If the Cordless Phone is not registered, one of the following messages appears on the Cordless Phone displays:

Searching for Gateway

or

Please place Cordless Phone in charger to start auto-registration with the gateway.

Reset the gateway to enable registration mode.

To register your Cordless Phone do the following.

1. Ensure the base unit is connected to power.
2. Place the Cordless Phone in the charger.
3. If the Cordless Phone does not register automatically, press and release the RESET button on the rear of the CORDLESS TRANSMITTER.

Pressing RESET reboots the CORDLESS TRANSMITTER, following which it remains in registration mode for 5 minutes. More than one Cordless Phone can be registered in this period. To start a new 5 minute registration period, press and release the RESET button again. Successful registration ends with the idle screen on the Cordless Phone as shown in the section Cordless Phone Idle Screen on page 62.



Note

If you encounter problems registering your Cordless Phone, try removing the Cordless Phone from the charger for approximately 5 seconds, and then replacing it in the charger, and then resetting the CORDLESS TRANSMITTER once again.

Cordless Phone Key Descriptions

The Cordless Phone has a front keypad as well as some side keys. These keys can be used to customize your Cordless Phone as well as make and manage calls.


The following table describes the keys on the key panel of your Cordless Phone.



Keys	Key Description
	Softkeys - Select from the right and left choices displayed in the bottom corners of the Cordless Phone screen using the softkeys. The Cordless Phone idle screen softkeys are Call log (left key) and Options (right key).
	Green Key - Answer an incoming call with the green key. From idle mode the green key connects to the caller or dials the number you have entered or selected.
	Red Key - End calls and exit menus using the red key. The red key also clears messages display on the screen such as missed calls and voicemail alerts. Note- Pressing the red key while within a menu may exit without saving changes.)
	OK Key - Access the Main Menu from idle mode, and use the OK key to select menu items whenever the icon appears at the bottom of the Cordless Phone screen.
	Navigation Keys - Scroll through menu items using the left, right, top, and bottom navigational keys.

AccessLine Communications

Owners Manual AccessLine 5-4-10

	Star Key - Change the input mode while entering text using the star key. The current input mode displays on the upper right corner of the screen. Lock or unlock the keypad from idle mode using the star key (press * then the Lock or Unlock softkey). A key appears at the top of the Cordless Phone display when the keypad is locked.
	Number Key - Toggle on or off the silent mode from the idle screen by pressing the “#” key, and pressing the Silence on or Silence off softkey as required
	Volume Keys - (Located on the side of the Cordless Phone.) Use the volume + and - keys during an active call to adjust the call volume. From idle mode, use the volume + key to view the system status menu, including the MAC address and IP address of your phone system.
	Speakerphone Key - (Located on the side of the Cordless Phone.) During a call you may toggle the speakerphone on and off using the speakerphone key.


Connection Status

The following table describes the states of the Connection Status Icon. The Connection Status Icon indicates if the Cordless Phone is within range of the Cordless Transmitter

Connection Status	Description
	Black Black - Indicates out of range of the Cordless Transmitter
	Yellow Black - Indicates within range of the Cordless Transmitter, but not ready for calls
	Yellow Yellow - Indicates within range of the Cordless Transmitter and ready for calls

Idle Mode Options

When in idle mode, the Options softkey displays in the lower right corner of the screen. Pressing the Options softkey displays the following options:

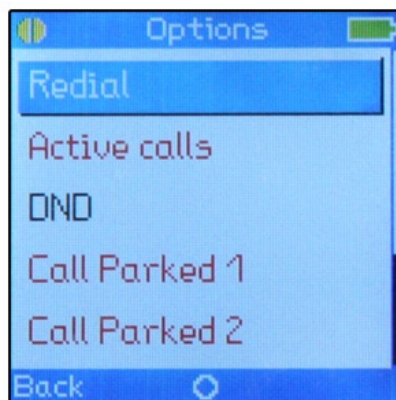


Option	Description
Redial	Allows you to redial the last number dialed. See Calling Using Redial on page 66.
Active Calls	Not used
DND	Allows you to enable/disable Do Not Disturb on your phone. See Setting Do Not Disturb on page 74.
Call Parked 1 to 4	Shows you the status of the 4 Call Park positions. Red indicates the call park position is not in use, black indicates the position is in use. See Call Park and Pickup on page 71.
Call Waiting	Allows you to enable/disable Call Waiting on your phone. See Setting Call Waiting on page 75.

Cordless Phone Main Menu

To display the Main Menu on the Cordless Phone, press the circular OK key in the center of the navigation keys as shown below.

The Cordless Phone Main Menu has five options to choose between when customizing and operating the phone

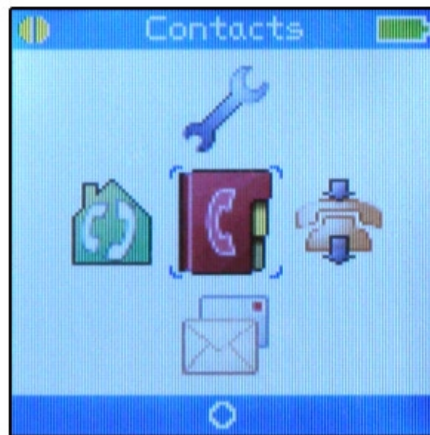

Icon	Description
	Intercom - Allows you use the Intercom feature and broadcast to all phones. For more information, see Intercom Calls on page 65
	Messages - Allows you to access and play your voicemail messages. By clicking the Voicemail icon, you will be presented with a screen that displays the number of new voicemail messages and the total number of voicemail messages in your voicemail box. For more information, see Voicemail on page 77.
	Call Log - Allows you to access and view the Call Log which contains a list of all incoming, outgoing, and missed calls. From the Call Log, you can also perform the following: • Add a selected entry as a contact in the Contacts List • Remove an entry from the Call Log and place it in the Contacts List • Place a call from the entry over VoIP • Edit the entry for placing a call • Delete a single entry • Delete all entries For more information, see Call Log on page 81.
	Settings - Allows you to customize your phone using the following settings: • Audio Settings • Telephony Settings • System Settings (the System Settings are preconfigured for use with your AccessLine service, therefore this menu item is disabled via an access code, for use by AccessLine technical support personnel only.) For more information, see Customizing Your Phone on page 72..
	Contacts - Allows you to access and view your Contacts List. From the Contacts List, you can also perform the following: • Place a call

AccessLine Communications

Owners Manual AccessLine 5-4-10

	• Add a contact • Edit a contact • Delete a contact • Delete all contacts • Set up a speed dial • Set up a group of contacts For more information, see Contacts List on page 78.
--	--

Using the Volume Control

The volume control is located on the left side of the phone. You can increase or decrease the volume while on an active call as required. To adjust the volume on the phone, do the following.

1. Press the  key to increase the volume as required.
2. Press the  key to decrease the volume as required.

Using the Speakerphone

The speakerphone control is located on the left side of the phone beneath the volume control. You can use the speakerphone key while dialing or during an active call to turn the speakerphone on and off. To turn the speakerphone on and off do the following:

1. Press the speakerphone key  to turn the speakerphone on.
2. A speaker appears at the top of the Cordless Phone display when the speakerphone is on.
3. Press the speakerphone key  again to turn the speakerphone off.

Locking/Unlocking the Keypad

You can lock and unlock the keypad on the phone when required. When locked, it prevents unauthorized users from using your phone, and prevents you from accidentally hitting the keypad if you are carrying the phone around. To lock or unlock the keypad do the following.

1. Press the * key.
2. Press the Lock or Unlock softkey.



The keypad unlocks automatically when you answer an incoming call.

Making and Answering Calls

The following sections describe how to make and answer phone calls with your Cordless Phones.

AccessLine Communications

Owners Manual AccessLine 5-4-10

Placing a call

1. In Idle mode, enter the number you want to dial.
2. Press the  key.

Intercom Calls

From any Cordless Phone, you may make an intercom call that is broadcast on all other Cordless Phones and Desk Phones

Making an Intercom Call

1. In Idle mode, dial 400
2. Press the  key.
3. Make your announcement then hang up

Note: You can also make an Intercom call from a Cordless Phone by pressing the OK  button, scrolling to the Intercom icon , pressing OK , selecting “All Handsets” and then pressing OK  again.

Calling a Contact

Since contacts may have more than one number listed, the number set as the default is dialed unless you specify otherwise.

To call a contact in the Contacts List and dial the default number for that contact, do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Select a contact from the Contacts List to call, and then press the green key.

The phone dials the default phone number assigned to that contact.

If you want to dial one of the other numbers for the contact instead of the default number, do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Select a contact from the Contacts List to call, and press OK .
4. Select a phone number from the list of numbers for that contact, and then press the Green key .

Calling from the Call Log

To call from an entry in the Call Log, do the following.

1. In Idle mode, press OK  to display the Main Menu.

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
2. Select Call Log  and press OK  (or In Idle mode, press the Call log softkey).
 3. Select the number you want to call, and then press the Green key

Calling Using Redial

To call using redial do the following.

1. In Idle mode, press the Options  softkey.
2. Select Redial, and then press OK .
3. The most recently dialed number displays.
4. Press the Green key  to call the number.

Calling Using Speed dial

To call using a speed dial key, do the following.

Note: You must pre configure the speed dial keys before using these procedures. To configure a speed dial on the phone, see Creating a Speed dial for a Contact on page 80.

1. In Idle mode, press the speed dial key assigned to the contact you want to call.
2. Press the Green key .

Answering Calls

Your Cordless Phone allows you to turn on and off auto answer features, such as answering a call when removed the Cordless Phone from the charging cradle, or connecting to incoming calls when any key is pressed.

Answering a Call

To answer a call from the Cordless Phone do the following.

1. Pick up the Cordless Phone
2. Press the Green key .

Note: If the Cordless Phone has auto answer enabled and is in the Cordless Phone cradle, simply picking up the phone will answer the call.

Answering a Call on the Speaker Phone

To answer a call on Speaker Phone, do the following:

1. When the phone rings, press the Speaker Phone  button on the left side of the phone
2. Begin speaking

Auto Answer Mode

In auto answer mode your Cordless Phone can answer a call automatically when you pick it up from the charging cradle. If the

AccessLine Communications

Owners Manual AccessLine 5-4-10

phone is not in the charger, you must still press a key to answer a call.

To enable or disable auto answer mode do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Telephony settings, and press OK .
4. Select Answer Mode, and press OK .
4. Select Auto answer, and press OK .
5. Navigate to Enabled or Disabled, and press OK  to select.

Any Key Answer Mode

You can choose to answer incoming calls by pressing any key, using the any key answer setting.

To enable or disable any key answer mode do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Telephony settings, and press OK .
4. Select Answer Mode, and press OK .
5. Select Any key answer, and press OK .
6. Navigate to Enabled or Disabled, and press OK  to select.

Caller ID

When you receive an incoming call, the Caller ID Number (if available) will be displayed on the phone.

An optional Caller ID Name feature is available from AccessLine that will allow the display of the caller's name (if available). Contact AccessLine customer care for information regarding availability and pricing for this option.

Handling Calls

Similar to the Desk Phones, the Cordless Phone can perform a host of call handling functions.

The table below describes the various call status icons you will see on your Cordless Phone screen depending on the activity you are performing.

Call Status	Description
-------------	-------------

	The green phone icon indicates that you have dial tone and may dial a phone number or extension
	The green phone icon with the raised handset indicates that you are connected to another phone
	The gray phone icon indicates that you are pre-dialing a phone number or extension. You must press the green key in order to place the call.
	The yellow phone icon indicates that a call is on hold
	The red phone icon indicates that you have disconnected.
	The green phone icon with a second yellow handset indicates that you are on one call with another call on hold

Placing a Call on Hold

You can place an active external call on hold if required. When a call is on hold, the “Call held” message displays at the top of the phone’s screen and the active call icon turns yellow. The caller on hold hears music playing until reconnected as an active call.

To place a call on hold, do the following.

1. During an active call, press the Options  softkey.
2. Select “Hold Call” and press OK .
3. Press the Back  softkey or the Red  key to return to the call.

Receiving a Second Call

While on an active call you may receive a second call on the same phone. You will be alerted to the second incoming call by a tone and will see the Caller ID information displayed on the screen.

To answer a second call, do the following.

1. Press the Green  key.
2. This will place the original caller on hold

Swapping Calls

While on an active call with a call on hold you can swap calls, switching which call is on hold.

To make the call on hold active and leave the active call on hold do the following.

1. Press the Options  softkey.
2. Select Swap calls and press OK 

Conferencing Calls

While on an active call with a second call on hold, you can connect to both calls at once.

To connect to both calls do the following.

1. Press the Options  softkey.
2. Select Conference and press OK 

Calling with a Call on Hold

You can make a second call while one call is on hold. The caller on hold hears music playing until reconnected as an active call.

To make a call while leaving a call on hold, do the following.

1. Place the active call on hold if you haven't already done so, (press the Options  softkey and select Hold call).
2. Enter a number or use the Options  softkey to find an Intercom, Contact, or Call Log number.
3. Press the Green  key to complete the call.
4. When the active call has disconnected or you have ended the call pressing the Red  key and you will return to the call on hold.

Transferring Calls

The Cordless Phone allows you to do both, attended (warm) and blind Call Transfer. You can transfer calls from your Cordless Phone to other Cordless Phones, Desk Phones or any other phone number.

Blind Call Transfer

Blind Transferring to another Cordless Phone or Desk Phone

You may transfer an active call to another Cordless Phone or Desk Phone.

To transfer a call to another Cordless Phone or Desk Phone do the following.

1. During an active call, press the Options  softkey
2. Select "Hold call" and press OK .
3. Press the Options  softkey.
4. Select Transfer, and press OK 
5. Dial the three digit extension number of the Cordless Phone or Desk phone that you want to transfer to.

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
6. Press OK  to transfer the call.

Blind Transferring to another phone number:

You may want to transfer an active call to another phone number. To transfer a call to a number you enter, do the following.

1. During an active call, press the Options  softkey
2. Select "Hold call" and press OK .
3. Press the Options  softkey.
4. Select Transfer, and press OK .
5. Dial the phone number that you want to transfer to.
6. Press OK  to transfer the call.

Blind Transferring to a Contacts List Number:

You may want to transfer an active call to a number in your Contacts List.

To transfer a call to a number in your Contacts List do the following.

1. During an active call, press the Options  softkey.
2. Select "Hold call" and press OK .
3. Press the Options  softkey.
4. Select Transfer, and press OK .
5. Press the Contacts  softkey.
6. Scroll through the contacts list and select the number you want, then press the Select  softkey.
7. Press the Green  key to connect the call to the contact and to you

Attended (Warm) Call Transfer

While on an active you can transfer one call to the other and announce the call before completing the transfer.

To do an Attended (warm) Call Transfer, do the following.

1. Press the Options  softkey.
2. Select Hold
3. Press OK .
4. While on the screen that shows "Call Held" dial the phone number or extension you wish to transfer to.
5. Press OK .
6. You are now talking to the new party while the original caller is still on hold
7. When you are ready to transfer, press the Options  soft key

-
8. Select Transfer and press OK 
 9. Your phone will disconnect.

Call Park and Call Pickup

Parking a Call

The Vertical Xcelerator supports 4 “Call Park” positions. To park an active call on your cordless phone:

1. During an active call, press the Options  softkey.
2. Scroll down to one of the free Call Parked positions (a free position is in red).
3. Press OK . The call will be parked.

Pickup a Parked Call

To pick up a call that has been parked on another phone:

1. From the Idle screen, press the Options  softkey.
2. Scroll down to desired in use Call Parked positions (the in use positions are in black)
3. Press OK  (the call will be released from Park on the other phone, and you will be connected to the call on the new phone)

Muting/Unmuting a Call

You can mute/unmute active calls if required. When a call is muted the bottom left softkey label reads Mute off, and although you can still hear the call, no one else connected to the call can hear you.

To mute or unmute a call, do the following:

1. During an active call, press the Mute  softkey.
2. Press the Mute off softkey to unmute the call.

Ending Calls

Press the Red  key. The Cordless Phone displays the call terminated icon  and then returns to the idle state screen.

Unconditional Call Forwarding

You can set your Cordless Phone to forward all calls to another phone number by using the Call Forwarding Unconditionally feature.

Configuring Unconditional Call Forwarding

To forward all calls to another phone number:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK 
3. Select Telephony settings, and press OK 

AccessLine Communications

Owners Manual AccessLine 5-4-10

-
4. Select Call Forwarding and press OK 
 5. Select Unconditionally, and press OK 
 6. Select "Enabled", and press OK  (or select "Disabled" if you want to disable unconditional call forwarding)
 7. Enter the desired forwarding phone number, and press OK , then press the Yes softkey at the prompt to Save
 8. Press the Red  key to go back to the idle menu

Busy Call Forwarding

You can set your Cordless Phone to forward calls if your phone is busy by using the Call Forwarding Busy feature.

Configuring Busy Call Forwarding

To forward all calls to another phone number when your phone is busy:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK 
3. Select Telephony settings, and press OK 
4. Select Call Forwarding and press OK 
5. Select On Busy, and press OK 
6. Select "Enabled", and press OK  (or select "Disabled" if you want to disable unconditional call forwarding)
7. Enter the desired forwarding phone number, and press OK , then press the Yes softkey at the prompt to Save
8. Press the Red  key to go back to the idle menu



Note

By default the On Busy Forwarding is set to forward to 200. 200 is the extension of the voicemail box. If you remove busy forwarding to 200, you must remember reestablish the forwarding to 200 in order for your calls to go to voicemail if your phone is busy.

No Answer Call Forwarding

You can set your Cordless Phone to forward calls if your phone is not answered by using the No Answer Call Forwarding feature.

Configuring No Answer Call Forwarding

To forward all calls to another phone number when your phone is not answered:

1. In Idle mode, press OK  to display the Main Menu.

-
2. Select Settings  and press OK 
 3. Select Telephony settings, and press OK 
 4. Select Call Forwarding and press OK 
 5. Select On No Answer, and press OK 
 6. Select "Enabled", and press OK  (or select "Disabled" if you want to disable unconditional call forwarding)
 7. Enter the desired forwarding phone number, and press OK 
 8. Enter the Timeout (number of seconds the phone should ring before forwarding) and press OK 
 9. Press the Yes softkey if prompted to Save
 10. Press the Red  key to go back to the idle menu



By default the On No Answer Forwarding is set to forward to 200. 200 is the extension of the voicemail box. If you remove No Answer Forwarding to 200, you must remember reestablish the forwarding to 200 in order for your calls to go to voicemail if your phone is not answered.

Customizing Your Cordless Phone

Entering Text, Numbers, and Symbols

The Cordless Phone interface allows you to perform several options to customize your phone, some of which require you to enter text and numbers on the Cordless Phone screen. This section describes how to enter text and numbers on your phone.

When in an option requiring you to enter or edit text or numbers (for example when adding contacts to the Contacts List), the following softkeys display for your use:

The Erase  softkey enables you to backspace and erase character that was just entered.

The Options  softkey provides you with the following two options:

- Input mode
- Insert symbol

Text Input Modes

When you reach a screen requiring text or numerical input, the Options softkey on the right allows you to switch between different types of input. Pressing the Options softkey you can choose between Input mode (for characters) and Insert symbol.

Input Characters:

Input mode allows you to select the format you want to enter text or numbers. You can select from the following formats for entering characters:

You can change the case of the letters as required and enable the numbers (even in the middle of text characters) by pressing the * key.

To change the text input mode when on a screen that requires you to enter or edit characters do the following.

1. Press the Options softkey.
2. Select Input Mode and press OK 
3. From the list of input modes, select the format you want to use to input characters or numbers, and press OK 

ABC Types all upper case letters.

Abc Types first letter in a sentence in upper case and the remaining letters in lower case.

abc Types all lower case letters.

123 Types numbers only.



Note

*While entering characters, you can press the * (star key) to quickly change the input mode. Whether selecting an input mode from the list, or pressing the * key, the current input mode displays in the upper right corner of the screen.*

Input Symbols

While inputting text or numbers, you can also insert symbol characters if required.

Input symbol brings up a screen of available symbols allowing you to insert symbols as needed.

To insert symbols when on a screen that requires you to enter or edit characters do the following.

1. Press the Options softkey.
2. Select Insert Symbol and press OK 
3. A screen displays available symbols.
4. Use the navigation keys to scroll to the symbol you want to insert.
5. Press OK 

The symbol you select displays in the position your cursor was in before you selected the symbol.

Time/Date and Time Zone

Your handset will automatically display the correct date and time of day according to the time zone associated with your location, as defined when you signed up for service. If the time zone is incorrect, please contact AccessLine Customer Care. You can

AccessLine Communications

Owners Manual AccessLine 5-4-10

temporarily adjust your time zone as shown below, however to make this change permanent in your account you must contact AccessLine Customer Care.

Temporarily Changing Time Zone

Time zones on the phone are specified in Greenwich Meridian Time (GMT) (same as Universal Time). GMT is measured from the Greenwich Meridian Line at the Royal Observatory in Greenwich. Greenwich is the place from where all time zones are measured.

To temporarily change the time zone:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Telephony Settings, and press OK .
4. Select Time and Date, and press OK .
5. Select Time zone and press OK .
6. Select the appropriate time zone and press OK .



NOTE: Pacific Time = "GMT-8"
Mountain Time = "GMT-7"
Central Time = "GMT-6"
Eastern Time = "GMT-5"

IMPORTANT: This will temporarily change your time zone. To permanently change the time zone on your account, please contact AccessLine Customer Care).

Setting Do Not Disturb

You can set your phone to send incoming calls directly to voicemail when you don't want to be interrupted. When Do Not Disturb (DND) is enabled, "DND" will appear on the Idle Screen right below your extension number.

To enable or disable Do Not Disturb (DND) do the following.

1. From the idle screen, press the Options softkey.
2. Select DND and press OK .
3. Select Enabled or Disabled and press OK .
4. Press the red  key to exit.

Setting Call Waiting

You can set your phone to alert you when another call comes in during an active call using the call waiting feature. You can then choose to answer the new call (leaving the original call on hold).

AccessLine Communications

Owners Manual AccessLine 5-4-10

Call waiting can be turned off if you do not want to be interrupted by other calls while you are in the middle of a call. If call waiting is turned off, then other new incoming calls will route to your voicemail.

To enable or disable call waiting do the following.

1. From the idle screen, press the Options  softkey.
2. Select Call Waiting and press OK .
3. Select Enabled or Disabled and press OK .
4. Press the red  key to exit.

Setting Audio

The Cordless Phone has a variety of audible indicators, ranging from incoming call rings to keypad button sounds. All sounds can be turned off or customized through the Cordless Phone menu.

Changing the Ringer Melody

You can specify a ringer melody for each type of call that you receive.

To change the ringer melody, do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Audio settings, and press OK .
4. Select Ringer Melody, and press OK .
5. Select the type of call for which you want to specify a ringer melody, and press OK .
6. Select a ringer melody from the list to assign to the selected type of call. You can scroll through the list of melodies using the navigation keys and can hear a sample of the assigned melody by pressing the Play softkey.
7. Press OK .

Changing the Ringer Volume

You can increase or decrease the ringer volume on a Cordless Phone.

To change the ringer volume, do the following:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Audio settings, and press OK .
4. Select Ringer volume, and press OK .
5. Use the navigation keys to adjust the volume, and press OK .

Changing the Message Tone

You can set a tone that notifies you of a message waiting on your phone. You can also disable message tones if required.

To set a message tone on your phone, do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Audio settings, and press OK .
4. Select Message tone, and press OK .
5. Select a tone from the list that notifies you of messages on your phone. You can scroll through the list of tones using the navigation keys and hear a sample of the tone by pressing the Play softkey. To disable message tones, select Silent.
6. Press OK .

Changing the Keypad Sound

When you press the keys on the keypad, a default tone is audible. You can change this tone or disable it if required. To change the keypad sound:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Audio settings, and press OK .
4. Select Keypad sound, and press OK .
4. Select a sound from the list that you want to hear when you press the keypad. You can scroll through the list of sounds using the navigation keys. To disable keypad sounds, select Silent.
5. Press OK .

Changing Advisory Tones

Advisory tones warn you that something is about to happen or is happening. There are three advisory tones you can enable or disable individually.

To set Advisory Tones on the Cordless Phone do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Audio settings, and press OK .
4. Select Advisory tones, and press OK .
5. Select the type of tone you want to enable or disable by pressing the OK key.

Enabling/Disabling Silent Mode

You can enable or disable a silent mode on the phone. When disabled, all ringer melodies, tones, confirmation sounds, and advisory tones are disabled. To enable/ disable silent mode:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Settings  and press OK .
3. Select Audio settings, and press OK .
4. Select Silence, and press OK .
5. Select Silent on to disable all sounds on the phone. Select Silent off to hear all sounds as you use the phone.
6. Press OK  to save the setting.



Note: You can also enable or disable the silent mode from the idle screen by pressing the “#” key, and pressing the Silence on softkey or Silence off softkey as required.

Voicemail

Each Cordless Phone has its own voicemail box. Similar to the Desk Phone, you may access voicemail through the phone, change your PIN and record your voicemail greeting.

To access your voicemail messages:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Messages  and press OK  (the number of messages will be displayed)
3. Press Play to access your messages
4. Enter your PIN code when prompted (the default pin code for your voicemail box is 0000)
5. Follow the voice menus to listen to your messages, delete your messages, record a greeting, or change your mailbox PIN.

Managing Contacts

Contacts List

The Contacts List on your phone is empty by default. You can manually enter new contacts in the list as required. Contacts stored on the cordless phone are separate from contacts stored on Desk Phones. The Contacts List allows you to enter a name and multiple numbers for each contact, as well as entering them in a contact group and assigning a special ring tone.

The Contact screen also provides an Options softkey that allows you to perform additional tasks in the Contacts List such as:

AccessLine Communications

Owners Manual AccessLine 5-4-10

Add Contact - Allows you to add new contacts to the Contacts List.

Edit Contact - Allows you to edit contacts in the Contacts List.

Delete Contact - Allows you to delete a contact from the Contacts List.

Delete All Contacts - Allows you to delete all of the contacts from the Contacts List.

Speed Dial - Allows you to add a selected contact to a specific speed dial key. Available speed dial keys are 1 through 9. The Speed dial can be used by pressing the applicable key on the phone's keypad.

Groups - Allows you to add, edit, delete, and assign ring melodies to a group of contacts.

Adding a Contact

To add a contact to the contacts list do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Press the Options  softkey.
4. Select Add contact, and press OK .
5. Press the Edit softkey, enter a name for this contact, and press OK .
6. When entering the name, press the * key to toggle the input modes. The current input mode displays in the upper right corner of the screen. Press the Options  softkey to select Insert symbol if required.
7. Scroll to the type of number you want to add, and press OK .
8. For each contact, you can assign the following phone numbers:
 - Home number
 - Cell number
 - Business number
 - Other number
9. Enter the phone number and press OK .
10. Press the Save softkey to save the contact.

Editing a Contact

To edit an existing contact, do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Select the contact you want to edit.
4. Press the Options  softkey.
5. Select Edit contact, and press OK 
 - A. To edit the name of the contact, scroll to the name and press the Edit softkey. Edit the contact name as applicable.

-
- B. To edit a number for the contact, scroll to the number and press the Edit softkey. Edit the number as applicable. Press the Options softkey to set the Number Type (Home, Mobile, Work, Other), set the number to be used as the Default number, or place a Pause after a digit to pause between digits when dialing.
 - C. To edit the ringer melody for the contact scroll down to Ringer melody and press the Edit softkey. Scroll to the melody you want and press OK  to select.
 - D. To use the Group associated with this contact, scroll down to Groups and press OK , then select the group you want to associate with this contact, then press OK .
6. Press the Back softkey and OK  as necessary to return to the contact entry.
 7. Press the Save softkey, and then press the Yes softkey at the save prompt.

Deleting a Contact

To delete a contact from the contacts list, do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Select the contact you want to delete.
4. Press the Options  softkey.
5. Select Delete contact, and press OK .
6. Press the Yes softkey at the delete prompt.

Deleting All Contacts

To delete all contacts in the Cordless Phone list, do the following.

1. In Idle mode, press OK .. to display the Main Menu.
2. Select Contacts  and press OK .
3. Press the Options  softkey.
4. Select Delete all contacts, and press OK .
5. Press the Yes softkey at the delete prompt.

Changing the Default Number for a Contact

The first number you save for a contact is automatically the default number. If you've created a speed dial for a contact, for example, it is always the default number that is dialed. You can change the default number for a contact as required.

To change the default number for a contact:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .

3. Select the contact for which you want to change the default number.
4. Press the Options  softkey.
5. Select Edit contact, and press OK .
6. Select the number you want to use as the default number for this contact, and press the Edit softkey.
7. Press the Options  softkey.
8. Select Default from the list of options, and press OK  and press the Yes  softkey at the prompt to confirm ...The number is now set as the default for this contact.
9. Press the Red  key to return to the contact. The new default number will be displayed in bold.
10. Press the Save  softkey to save the setting, and press the Yes softkey at the save prompt.

Creating a Speed dial for a Contact

You can create a speed dial to use for a specific contact in your Contacts List allowing you to call the number quickly.

To create a speed dial for a contact:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Select the contact for which you want to create a speed dial, and press the Options  softkey.
4. Select Speed dial, and press OK .
5. Select a speed dial key (from 1 through 9) to assign to the contact.
6. Press the Add  softkey to add the contact to that speed dial key.
7. The speed dial is immediately applied.
8. Press the Red  key to exit.



Note

Note: To call a speed dial entry press the speed dial number and then press OK ...

Note: In the speed dial screen, to replace an existing entry select the speed dial entry you want to replace, and press the Replace softkey. To delete a speed dial key, scroll to the speed dial you want to delete and press the Delete softkey.

Groups of Contacts

Adding contacts to groups allows you to view pages of entries by group, simplifying looking people up in a large Contacts List. You can also assign ring tones to groups of contacts, helping you identify incoming calls.

Creating a Contact Group

Before you can add a contact to a group, you must create the empty group. Each group has its own page in the Contacts List accessed using the right and left navigation keys.

AccessLine Communications

Owners Manual AccessLine 5-4-10

To add a group to your Contacts List do the following.

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Press the Options  softkey.
4. Scroll down to select Groups and press OK .
5. Press the Options  softkey again.
6. Select Add group and press OK .
7. Enter the name for your new group, and press OK .
8. Press the Yes  softkey when prompted to save.

Adding a Contact to a Group

1. In Idle mode, press OK  to display the Main Menu.
2. Select Contacts  and press OK .
3. Select the contact to add to a group and press the Options  softkey.
4. Scroll down to Edit contact and press OK .
5. On the Contacts page scroll past the icons to Groups and press OK .
6. Select the group or groups you want this contact added to using the OK  key.
7. Press the Red  key to return to the contact page.
8. Press the Save  softkey to save your changes to this contact, pressing the Yes  softkey when prompted.

Call Log

The call log keeps track of all your incoming and outgoing calls. It consists of four pages or screens that you can scroll through using the navigation keys on the Cordless Phone, including a page of all calls, and then lists by category. The following icons apply to calls in the Call Log.

Incoming 

Outgoing 

Missed 

The call log stores up to 30 numbers. For each call the call log keeps track of the number (if available), the date and time of the call, and the type of call: incoming, outgoing, or missed. If the

AccessLine Communications

Owners Manual AccessLine 5-4-10

caller's name and number is stored in the Contacts List, the caller's name displays. A number or name is only listed once, but all missed calls are counted so you can see how many times the same caller has tried to reach you.

Viewing Entries in the Call Log

To view entries in the Call Log:

1. In Idle mode, press OK  to display the Main Menu.
2. Select Call Log  and press OK  (or in Idle mode, press the Call log  softkey).
3. Use the up and down navigation keys to scroll through the names and numbers on each page.
4. Use the right and left navigation keys to scroll through each page (All calls, Missed calls, Incoming calls, Outgoing calls).
5. Use the Options  softkey on each page to perform additional tasks on your Call Log entries, including:
 - Add as contact
 - Append to contact
 - Call on VoIP
 - Edit for call
 - Delete
 - Delete list

Resetting the Cordless Transmitter

In order for your Cordless Phones to register with the Cordless Transmitter, when you first install a new Cordless Phone you must press the RESET button on the rear of the Cordless Transmitter.

Once your phone is registered you should not need to repeat this procedure.

Each time you reset the Cordless Transmitter, the Cordless Phones will re-register. Make sure Cordless Phones are within range of the Cordless Transmitter to register properly.

To reset the CORDLESS TRANSMITTER:

- Momentarily press and release the RESET button on the rear of the CORDLESS TRANSMITTER (do not hold it down).
- On the front of the CORDLESS TRANSMITTER, the POWER light will remain on steadily during a reset and the I-NET light will flash and the VoIP light will go out.
- After a few minutes when the reset is complete the I-NET light will remain on steadily, and the VoIP light will come back on, indicating the CORDLESS TRANSMITTER is ready to use.

Note: Check to be sure all Cordless Phones are registered (or reconnected) properly with the CORDLESS TRANSMITTER after the reset is complete.